





Fronius Ohmpilot

Fronius Ohmpilot



Bedienungsanleitung

Wärmelösung

Operating instructions

Heating solution





42,0410,2141 003-23042021

Fronius prints on elemental chlorine free paper (ECF) sourced from certified sustainable forests (FSC).

Inhaltsverzeichnis

Sicherheitsvorschriften.	
Erklarung Sicherneitsninweise	
Umgebungsbedingungen	b
Qualifizieries Personal	
Angaben zu Gerauschemissions-weiten	
Datansicherheit	
Urbeberrecht	
	9
Allgemeines	
Bestimmungsgemäße Verwendung.	
Komponenten der Gesamtlosung	
Geratebeschreibung.	
Bei der Auslegung des Systems zu beachten	
Warnhinweise am Gerat	
Anzeigen/Begieneiemente am Gerat	
Auswani der Heizung	
1 - phasige Heizung	
3 - pnasige Heizung:	
Beispiel für die Berechnung der Ladedauer	
Installation und Inbetriebnahme	17
Standort-Wahl und Montagelage	
Standort-wahl allgemein	
Standort-Wahl	
Symbolerklärung - Montagelage	
Wandmontage	
Sicherheit	22
Auswahl von Dübel und Schrauben	22
Schrauben Empfehlung	22
Ohmpilot an der Wand montieren	
Installation	
Abisolierlängen	
Elektrischer Anschluss	
1-phasiger Heizstab bis 3 kW	
Anwendungsbeispiel 1	
3-phasiger Heizstab 900 W bis 9 kW	
Anwendungsbeispiel 2	
1-phasiger Heizstab bis 3 kW mit Wärmepumpen-Ansteuerung	
Anwendungsbeispiel 3	
Einstellungen im Menubereich	
1-phasiger Heizstab bis 3 kw und Fremaquelle	
Anwendungsbeispiel 4	
Einstellungen im Menubereich.	
Zwei Heizstabe - 3-phasig und T-phasig	
Anwendungsbeispiel 5	
Einstellungen im Menubereich	
Anwendungsbeispiel o	
Mäalisha Kommunikationswoga	
Wechselrichter mit Ohmnilot konneln	

Verbindung über Modbus RTU einrichten	
Verbindung über LAN einrichten	
Verbindung über WLAN einrichten	
Weboberfläche des Ohmpilots	4
Webinterface	
Status Anzeigen am Webinterface	
Optionale Einstellungen	
Manuelle Einstellungen HEIZUNG 1	5
Legionellenschutz aktivieren	5
Tagesverlauf anpassen	5
Temperaturbegrenzung	
Anhang	5
Statusmeldungen	5
Statusmeldungen	5
Technische Daten	
Eingangsdaten	5
Schnittstellen	5
Ausgangsdaten	
Allgemeine Daten	5
Prüfungen / Angaben	
Prüfungen/Angaben	5
Garantiebedingungen und Entsorgung	
Fronius Werksgarantie	
Entsorgung	
Berücksichtigte Normen und Richtlinien	

Sicherheitsvorschriften

Erklärung Sicherheitshinweise

GEFAHR!

Bezeichnet eine unmittelbar drohende Gefahr.

Wenn sie nicht gemieden wird, sind Tod oder schwerste Verletzungen die Folge.

🚹 WARNUNG!

Bezeichnet eine möglicherweise gefährliche Situation.

 Wenn sie nicht gemieden wird, können Tod und schwerste Verletzungen die Folge sein.

VORSICHT!

Bezeichnet eine möglicherweise schädliche Situation.

 Wenn sie nicht gemieden wird, können leichte oder geringfügige Verletzungen sowie Sachschäden die Folge sein.

HINWEIS!

Bezeichnet die Möglichkeit beeinträchtigter Arbeitsergebnisse und von Schäden an der Ausrüstung.

Allgemeines

Das Gerät ist nach dem Stand der Technik und den anerkannten sicherheitstechnischen Regeln gefertigt. Dennoch droht bei Fehlbedienung oder Missbrauch Gefahr für

- Leib und Leben des Bedieners oder Dritte,
- das Gerät und andere Sachwerte des Betreibers.

Alle Personen, die mit der Inbetriebnahme, Wartung und Instandhaltung des Gerätes zu tun haben, müssen

- entsprechend qualifiziert sein,
- Kenntnisse im Umgang mit Elektroinstallationen haben und
- diese Bedienungsanleitung vollständig lesen und genau befolgen.

Die Bedienungsanleitung ist ständig am Einsatzort des Gerätes aufzubewahren. Ergänzend zur Bedienungsanleitung sind die allgemein gültigen sowie die örtlichen Regeln zu Unfallverhütung und Umweltschutz zu beachten.

Alle Sicherheits- und Gefahrenhinweise am Gerät

- in lesbarem Zustand halten
- nicht beschädigen
- nicht entfernen
- nicht abdecken, überkleben oder übermalen.

Die Anschlussklemmen können hohe Temperaturen erreichen.

Das Gerät nur betreiben, wenn alle Schutzeinrichtungen voll funktionstüchtig sind. Sind die Schutzeinrichtungen nicht voll funktionstüchtig, besteht die Gefahr für

- Leib und Leben des Bedieners oder Dritte,
- das Gerät und andere Sachwerte des Betreibers

Nicht voll funktionstüchtige Sicherheitseinrichtungen vor dem Einschalten des Gerätes von einem autorisierten Fachbetrieb instandsetzen lassen.

	Schutzeinrichtungen niemals umgehen oder außer Betrieb setzen.						
	Die Positionen der Sicherheits- und Gefahrenhinweise am Gerät sind aus dem Kapitel "Allgemeines" der Bedienungsanleitung des Gerätes zu entnehmen.						
	Störungen, die die Sicherheit beeinträchtigen können, vor dem Einschalten des Gerätes beseitigen.						
	Es geht um Ihre Sicherheit!						
Umgebungsbe- dingungen	Betrieb oder Lagerung des Geräts außerhalb des angegebenen Bereichs gilt als nicht bestimmungsgemäß. Für hieraus entstandene Schäden haftet der Hersteller nicht.						
Qualifiziertes Per- sonal	Die Service-Informationen in dieser Bedienungsanleitung sind nur für qualifiziertes Fach- personal bestimmt. Ein elektrischer Schlag kann tödlich sein. Führen Sie keine anderen als die in der Dokumentation angeführten Tätigkeiten aus. Das gilt auch, wenn Sie dafür qualifiziert sind.						
	Sämtliche Kabel und Leitungen müssen fest, unbeschädigt, isoliert und ausreichend dimensioniert sein. Lose Verbindungen, angeschmorte, beschädigte oder unterdimensio- nierte Kabel und Leitungen sofort von einem autorisierten Fachbetrieb instandsetzen las- sen.						
	Wartung und Instandsetzung dürfen nur durch einen autorisierten Fachbetrieb erfolgen.						
	Bei fremdbezogenen Teilen ist nicht gewährleistet, dass diese beanspruchungs- und sicherheitsgerecht konstruiert und gefertigt sind. Nur Original-Ersatzteile verwenden (gilt auch für Normteile).						
	Ohne Genehmigung des Herstellers keine Veränderungen, Ein- oder Umbauten am Gerät vornehmen.						
	Bauteile in nicht einwandfreiem Zustand sofort austauschen.						
Angaben zu Geräuschemissi-	Der maximale Schall-Leistungspegel des Wechselrichters ist in den technischen Daten angegeben.						
ons-Werten	Die Kühlung des Gerätes erfolgt durch eine elektronische Temperaturregelung so geräuscharm wie möglich und ist abhängig von der umgesetzten Leistung, der Umge- bungstemperatur, der Verschmutzung des Gerätes u.a.m.						
	Ein arbeitsplatzbezogener Emissionswert kann für dieses Gerät nicht angegeben wer- den, da der tatsächlich auftretende Schalldruck-Pegel stark von der Montagesituation, der Netzqualität, den umgebenden Wänden und den allgemeinen Raumeigenschaften abhängig ist.						
EMV-Maßnahmen	In besonderen Fällen können trotz Einhaltung der genormten Emissions- Grenzwerte Beeinflussungen für das vorgesehene Anwendungsgebiet auftreten (z.B. wenn empfind- liche Geräte am Aufstellungsort sind oder wenn der Aufstellungsort in der Nähe von Radio- oder Fernsehempfängern ist). In diesem Fall ist der Betreiber verpflichtet, ange- messene Maßnahmen für die Störungsbehebung zu ergreifen.						

Datensicherheit	Für die Datensicherung von Änderungen gegenüber den Werkseinstellungen ist der Anwender verantwortlich. Im Falle gelöschter persönlicher Einstellungen haftet der Her- steller nicht. Das Urheberrecht an dieser Bedienungsanleitung verbleibt beim Hersteller.				
Urheberrecht					
	Text und Abbildungen entsprechen dem technischen Stand bei Drucklegung. Änderun- gen vorbehalten. Der Inhalt der Bedienungsanleitung begründet keinerlei Ansprüche sei- tens des Käufers. Für Verbesserungsvorschläge und Hinweise auf Fehler in der Bedie- nungsanleitung sind wir dankbar.				

Allgemeine Informationen

Bestimmungs- gemäße Verwen- dung	Mit der "24h Sonne"-Vision verfolgt Fronius das Ziel, seinen Kunden Lösungen anzubie- ten, um Energie intelligent und kosteneffizient zu erzeugen, zu speichern, zu verteilen und zu verbrauchen. Die Nutzung überschüssiger Energie zur Warmwasseraufbereitung stellt eine einfache, mit geringen Investitionskosten verbundene Möglichkeit dar, Strom in Form von Wärme zu speichern und zu einem beliebigen Zeitpunkt zu verbrauchen. Der Fronius Ohmpilot, der genau diese Aufgabe übernimmt, ist somit eine ideale Ergänzung des Fronius-Produktportfolios im Bereich Energiemanagement und ein weite- rer Schritt in Richtung "24h Sonne".							
Komponenten der Gesamtlösung	 Die gesamte Lösung besteht aus folgenden Komponenten: Wechselrichter Fronius Snaplnverter- oder GEN24-Serie Fronius Symo / Galvo / Eco oder Primo (ab Fronius Datamanager 2.0 Software-Version 3.8.1-x) oder Fronius Symo Hybrid (ab Fronius Hybridmanager Software-Version V1.8.1.x) Fronius Primo / Symo GEN24 Fronius Smart Meter Fronius Ohmpilot Ohmscher Verbraucher (z.B. Boiler mit Heizstab) 							
Fronius Smart Meter einbinden	Für den Betrieb des Ohmpilots ist ein Fronius Smart Meter notwendig, sodass die Über- schussenergie gemessen werden kann. Auf der Webseite des Wechselrichters muss eingestellt werden, ob der Fronius Smart Meter am Einspeisepunkt oder im Verbrauchs- zweig eingebaut ist.							
Gerätebeschrei- bung	 Beim Ohmpilot handelt es sich um ein separates Gerät, das die überschüssige Leistung aus der PV-Anlage mittels Pulsweitenmodulation stufenlos für eine Phase zwischen 0 und 100% (bzw. 0 und 3 kW) regeln kann. Darüber hinaus verfügt der Ohmpilot über 2 zusätzliche Ausgänge zum Schalten weiterer Phasen. Dadurch können Heizstäbe mit einer Leistung von 300 W bis 9 kW stufenlos geregelt werden. Ein Heizstab bis 3 kW Leistung kann stufenlos über eine Phase geregelt werden. Bei einem Heizstab mit 9 kW Leistung wird die überschüssige Leistung von 0 - 3 kW auf Phase 1 stufenlos geregelt. Steht darüber hinaus noch mehr Leistung zur Verfügung, schaltet der Ohmpilot Phase 2 dazu und Phase 1 kann erneut zwischen 3 – 6 kW stufen los regeln. Ist die verfügbare Leistung höher als 6 kW, so schaltet der Ohmpilot Phase 3 dazu und Phase 1 regelt wieder zwischen 6 und 9 kW stufenlos. 							
	Leistungsbereich	Phase 1	Phase 2	Phase 3				
	0 - 3 kW	0 - 3 kW stufenlos	-	-				
	3 - 6 kW	0 - 3 kW stufenlos	v stufenlos 3 kW fix -					
	6 - 9 kW	0 - 3 kW stufenlos	3 kW fix	3 kW fix				

Auch andere ohmsche Verbraucher wie zum Beispiel Infrarotheizungen, Handtuchtrockner können angesteuert werden.

Bei der Auslegung des Systems zu beachten

HINWEIS!

Phasenregelung des Ohmpiloten

Der Ohmpilot regelt auf die Summe aller Phasen. Für den seltenen Fall einer phasengenauen Abrechnung ist der Ohmpilot nicht geeignet.

HINWEIS!

Ohmpilot und Fronius Datamanager / Hybridmanager

Es kann nur ein Ohmpilot pro Fronius Datamanager / Hybridmanager verwendet werden.

HINWEIS!

Ohmpilot und dynamische Leistungsbegrenzung

Ab Softwareversion 3.13.1-x vom Fronius Datamanager oder. 1.11.1-x vom Hybridmanager kann der Ohmpilot gemeinsam mit der dynamischen Leistungsbegrenzung von 0-100% eingesetzt werden.

HINWEIS!

Verwendung anderer Erzeugungsquellen

Mit der Fronius Datamanager Box 2.0 kann auch jede andere Erzeugungsquelle (BHKW, Fremdwechselrichter,...) verwendet werden. Da aber die Information über die produzierte Leistung und den Verbrauch fehlt, können diese im Solarweb nicht angezeigt werden.

HINWEIS!

Im Notstromfall kann der Ohmpilot auf Grund der hohen Heizleistungen nicht betrieben werden.

Es wird empfohlen den Ohmpilot außerhalb des Notstromzweiges zu installieren. Ist der Ohmpilot im Notstromzweig installiert, so ist bei Stromausfall der ggf. vorhandene Leitungsschutzschalter des Ohmpilot auszuschalten. Alternativ muss die Heizstabausmessung auf manuell umgestellt werden, sowie die Mindesttemperatur und der Legionellenschutz deaktiviert werden. (siehe Kapitel "Legionellenschutz aktivieren" auf Seite 2.2). Die für diese Funktionen benötigten Leistungen überschreiten die Leistungsgrenzen im Notstrombetrieb. Da der Start des Notstrombetriebes von diesen Funktionen verhindert wird, können diese Einstellungen während eines Netzausfalls nicht mehr vorgenommen werden.

VORSICHT!

Gefahr durch Anschluss eines falschen Verbrauchers (z.B. Heizlüfter). Zerstörung des Verbrauchers ist die Folge.

Ausschließlich rein ohmsche Verbraucher anschließen.

VORSICHT!

Gefahr durch Anschluss eines elektronischen Thermostats.

- Zerstörung des Ohmpilots oder des Verbrauchers ist die Folge.
- Mechanische Temperaturschalter verwenden.

WICHTIG! Bei hartem Wasser kann es zur Verkalkung des Heizstabes kommen, insbesondere wenn die Mindesttemperatur auf über 60 °C eingestellt wird. Wir empfehlen eine jährliche Überprüfung. Dazu den Heizstab vom Speicher demontieren und von Kalk befreien. Die Oberfläche des Heizstabes nicht zerkratzen (Korrosionsbildung).

Warnhinweise am Gerät

Auf der linke Seite des Ohmpilot befinden sich Warnhinweise und Sicherheitssymbole. Diese Warnhinweise und Sicherheitssymbole dürfen weder entfernt noch übermalt werden. Die Hinweise und Symbole warnen vor Fehlbedienung, woraus schwerwiegende Personen- und Sachschäden resultieren können.



Sicherheitssymbole:



Gefahr von schwerwiegenden Personen- und Sachschäden durch Fehlbedienung



Beschriebene Funktionen erst anwenden, wenn folgende Dokumente vollständig gelesen und verstanden wurden:

- diese Bedienungsanleitung
- sämtliche Bedienungsanleitungen der Systemkomponenten der Photovoltaikanlage, insbesondere Sicherheitsvorschriften



Gefährliche elektrische Spannung

Vor dem Öffnen des Geräts, Entladezeit der Kondensatoren abwarten!



Heiße Oberfläche

Text der Warnhinweise:

WARNUNG!

Ein elektrischer Schlag kann tödlich sein. Vor dem Öffnen des Geräts dafür sorgen, dass Ein- und Ausgangsseite spannungsfrei sind. Entladezeit der Kondensatoren abwarten (15 Sekunden).

WARNUNG!

Das Gerät darf nicht abgedeckt werden und es darf nichts über das Gerät oder die Kabel gehängt werden.

Bedienelemente und Anschlüsse

Anzeigen/Bedien- elemente am Gerät			1x WPS 2x ACCESS POINT 3x BOOST
	Fronkus © → ▲ ▲ ▲ ■ © =- Ohmplot	1x drücken 2x drücken	WPS (Wi-Fi Protected Setup) wird für 2 Minuten oder bis zum erfolgreichen Pai- ring mit dem Router geöffnet. Durch Drücken der WPS Taste am Router wird dem Ohmpilot das WLAN Passwort übermittelt.
		3x drücken	WLAN Access Point wird für 30 Minuten aktiviert, sodass über die Fronius Solar Web App Einstellungen am Ohmpilot vorgenommen werden können.
		Erneutes	Boostmode - Dimmerstufe wird für 4 Stunden mit 100% angesteuert, L2 und L3 wird durchgeschalten. Dadurch kann ein Netzbezug entstehen.
		Drücken	Ohmpilot wird wieder in Standard Arbeitsmodus versetzt, Boostmode, Access Point oder WPS werden deakti- viert.
	Heizung Anzeige	Dunkel Grün blinkend	Keine Spannungsversorgung am Ohm- piloten. Je schneller die Blinkfrequenz, desto mehr Heizleistung. Bei 0 W Heizleistung blinkt die LED langsam, bei voller Leis-
		Grün 2x blin- kend Grün leuchtend	tung schnell. Es wird die Leistung des Heizstabes vermessen und erkannt, ob ein 1- oder 3- phasiger Heizstab angeschlossen ist. Mindesttemperatur unterschritten oder Legionellenschutz aktiv (Volle Heizleis-
			tung).
	Verbindungsan- zeige LAN / WLAN	Dunkel Blau 1x blinkend Blau 2x blinkend Blau leuchtend	Keine Verbindung WPS (Wi-Fi Protected Setup) geöffnet WLAN Access Point geöffnet Verbindung mit Netzwerk
	Fehleranzeige	Dunkel Rot 1x blinkend Rot 2x blinkend Rot 3x blinkend Rot 4x blinkend Rot 5x blinkend	Kein Fehler Keine Verbindung mit dem Wechselrich- ter Temperaturmessung fehlerhaft Heizstabdefekt Ohmpilot defekt Mindesttemperatur nicht erreicht
		Eine detaillierte F	ehlerbeschreibung erfolgt im Solar Web.

Anschlussbereich



- (1) LED grün
- (2) LED blau
- (3) LED rot
- (4) Taster
- (5) Ethernet RJ45 mind. CAT5, geschirmt
- (6) Modbus RTU (Defaultadresse 40)
 Federzug 0,2 1,5 mm², max. 1000m, geschirmt und verdrillt
- (7) Anschluss Klemme Temperatursensor PT 1000, Federzug 0,2 - 1,5 mm²
- (8) EINGANG Zuleitung Netz
 1x 230 V, oder 3x 230 V, Federzug 1,5 2,5 mm²
- (9) AUSGANG Heizstab L3 Federzug 1,5 - 2,5 mm²
- (10) AUSGANG Heizstab L2 Federzug 1,5 - 2,5 mm²
- (11) Multifunktions-Relaisausgang, (siehe Anwendungsbeispiele) regelbar max. 13 A ohmsche Last, Federzug 1,5 - 2,5 mm²

WARNUNG!

Gefährliche Spannungen.

Ein Draht löst sich und berührt gefährliche Spannungen.

- Werden Signalkabel angeschlossen, müssen die einzelnen Drähte unmittelbar vor der Klemme mit einem Kabelbinder zusammengebunden werden.
- (12) AUSGANG Heizstab

stufenlos bis 3 kW

Auswahl der Heizung

1 - phasige Hei- zung	Es wird von 0 bis 3 kW stufenlos geregelt - 0,3 bis 3 kW - Rein Ohmscher Verbrauch (kein elektronischer Temperaturbegrenzer, Lüfter,)
3 - phasige Hei- zung:	 Es wird von 0 bis 9 kW stufenlos geregelt. 0,9 bis 9 kW gleiche Lastaufteilung auf alle 3 Phasen (z.B. 3 x 3 kW). Falls ein mechanischer Temperaturschalter verwendet wird, muss dieser alle 3 Phasen gleichzeitig schalten. Rein Ohmscher Verbraucher (kein elektronischer Temperaturbegrenzer, Lüfter,) Neutralleiter muss ausgeführt sein (meistens kann dies auch nachgerüstet werden)
	Lin metalisoner temperaturschalter ver- einfacht die Inbetriebnahme und die Nut- zung. Falls kein mechanischer Tempera- turschalter zur Verfügung steht, kann am Ohmpilot auch ein Temperatursensor angeschlossen werden, welcher die maxi- male Temperatur begrenzt. (siehe Kapitel "Temperaturbegrenzung" auf Seite 2.4)

Beispiel für die Berechnung der Ladedauer

500l Boiler, Heizung kann ganz unten im Boiler eingebaut werden, Temperaturspreizung 45 - 60 °C = 15 °C; 4,5 kW Heizung

Mögliche Speicherenergie = 0,5 m³ x 1,16 kWh x 15 °C = 8,7 kWh Wird die Heizung voll angesteuert, dauert die Erwärmung ca. 2 Stunden (8,7 kWh / 4,5 kW)

HINWEIS!

Leistung anpassen

Damit die Überschussleistung optimal genutzt wird und das Warm wasser rasch nachgeheizt wird, sollte die Leistung der Heizung an die PV Anlagenleistung angepasst sein. z.B. 5kWp => 4,5kW Heizung

Installation und Inbetriebnahme

Standort-Wahl und Montagelage

gemein

Bei der Standort-wahl für den Ohmpilot folgende Kriterien beachten:

Installation nur auf festem Untergrund.



Bei Einbau des Ohmpilot in einen abgeschlossenen Raum durch Zwangsbelüftung für eine ausreichende Wärmeabfuhr sorgen.

WICHTIG! Die maximale Leitungslänge vom Ausgang des Ohmpilot zum Verbraucher (Heizstab) darf 5 m nicht überschreiten.



 Den Ohmpilot nicht montieren: im Einzugsbereich von Ammoniak, ätzenden Dämpfen, Säuren oder Salzen (z.B. Düngemittel-Lagerplätze, Lüftungsöffnungen von Viehstallungen, chemische Anlagen, Gerberei-Anlagen, etc.)
 Den Ohmpilot nicht montieren in: Räumen mit erhöhter Unfallgefahr durch Nutztiere (Pferde, Rinder, Schafe, Schweine, etc.) Ställen und angrenzenden Nebenräumen Lager- und Vorratsräumen für Heu, Stroh, Häcksel, Kraftfutter, Düngemittel, etc.
Grundsätzlich ist der Ohmpilot staubdicht ausgeführt. In Bereichen mit starker Staubansammlung können jedoch die Kühlflächen verstauben und somit die thermische Leistungsfähigkeit beeinträchtigen. In die- sem Fall ist eine regelmäßige Säuberung erforderlich. Eine Montage in Räumen und Umgebungen mit starker Staubentwicklung ist daher nicht zu empfehlen.
 Den Ohmpilot nicht montieren in: Gewächshäusern Lager- und Verarbeitungsräumen für Obst, Gemüse und Weinbauprodukte Räumen für die Aufbereitung von Körnern, Grünfutter und Futtermitteln





Den Ohmpilot nicht in Schräglage an einer senkrechten Wand montieren.



Den Ohmpilot nicht in Horizontallage an einer senkrechten Wand montieren.



Den Ohmpilot nicht überhängend mit den Anschlüssen nach oben montieren.



montieren.

Den Ohmpilot nicht überhängend mit den Anschlüssen nach oben

Den Ohmpilot nicht überhängend mit den Anschlüssen nach unten montieren.



Den Ohmpilot nicht an der Decke montieren.

Wandmontage

Sicherheit	A WARNUNG!						
	Gefahr durch Restspannung von Kondensatoren Ein elektrischer Schlag kann tödlich sein ▶ Entladezeit der Kondensatoren abwarten. Die Entladezeit beträgt 15 Sekunden.						
	A WARNUNG!						
	 Verbrennungsgefahr am Kühlkörper im offenen Zustand. Personenschäden können die Folge sein. Kühlkörper auskühlen lassen. Heißen Kühlkörper nicht berühren. Geeignete Schutzausrichtung tragen. 						
	WICHTIG! Die Schutzart IP 54 gilt nur, wenn der Deckel mit der Rückseite fest ver- schraubt ist.						
Auswahl von Dübel und Schrauben	WICHTIG! Je nach Untergrund ist unterschiedliches Befestigungsmaterial für die Mon- tage des Ohmpilots erforderlich. Das Befestigungsmaterial ist daher nicht im Lieferum- fang des Ohmpilots enthalten. Der Monteur ist für die richtige Auswahl des Befestigungs- materials selbst verantwortlich. Der Ohmpilot muss mit vier Schrauben montiert werden. Stellen Sie sicher, dass die Schrauben fest sitzen und die Wand tragfähig ist.						
Schrauben Emp- fehlung	Für die Montage des Ohmpilots empfiehlt der Hersteller Stahlschrauben mit einem Durchmesser von 4 - 6 mm zu verwenden.						
	 Gefahr durch Verschmutzung oder Wasser an den Anschlüssen oder der Elektro- nik Schäden am Ohmpilot können die Folge sein. Beim Bohren darauf achten, dass Anschlussklemmen und Elektronik nicht ver- schmutzt oder nass werden. 						

Ohmpilot an der Wand montieren



DE

Installation



Elektrischer Anschluss

WARNUNG!

Gefahr durch unzureichende Schutzleiter-Verbindung.

- Schwerwiegende Personen- oder Sachschäden können die Folge sein.
 - Schutzleiter-Verbindung ausreichend dimensionieren.

WICHTIG! Der elektrische Anschluss darf nur von einem Fachmann durchgeführt werden.

WICHTIG! Die Schutzleiterverbindung muss einwandfrei verlegt und zuverlässig angeschlossen sein.

WICHTIG! Der Ohmpilot muss netzseitig mit einer Überstromschutzeinrichtung von maximal B16 A und einem Fehlerstrom-Schutzschalter ausgerüstet werden.

WICHTIG! Abgangsseitig ist darauf zu achten, dass nur rein ohmsche Lasten angeschlossen werden.

WICHTIG! Die maximale Leitungslänge vom Ausgang des Ohmpilot zum Verbraucher (Heizstab) darf aus EMV Gründen 5m nicht überschreiten.

WICHTIG! Der Ohmpilot muss vor Überspannung aus dem Netz geschützt werden.

WICHTIG! Bei Anschluss eines Heizstabes die Erdung des Boilers/Puffers sowie der Heizanlage prüfen. Ebenso die maximal zulässige Vorlauf- und Warmwassertemperatur bei der Einstellung der Temperatur am Heizstab.

WICHTIG! Die RS485 Leitung sollte als Datenkabel ausgeführt sein, um beim Anschluss eine Verwechslung mit der Netzleitung zu vermeiden.

1-phasiger Heizstab bis 3 kW



- (1) **EINGANG Zuleitung von Netz** 1x 230V, Federzug 1,5 2,5 mm²
- (2) AUSGANG bis 3 kW regelbar, max. 13A ohmsche Last, Federzug 1,5 2,5 mm²
- (3) Warmwasser Boiler
- (4) **Temperatursensor** PT1000
- (5) **Fremdquelle** (z.B. Gastherme)
- (6) Heizstab (max. 3 kW)
- (7) Fehlerstrom-Schutzschalter
- (8) Leistungs-Schutzschalter max. B16A
- (9) **Ferrit** (im Lieferumfang)

WICHTIG! Plug & Play - Bei dieser Anwendung sind nach erfolgreicher Verbindung zum Wechselrichter keine weiteren Einstellungen notwendig.

Der Fronius Smart Meter erfasst am Einspeisepunkt die aktuelle Leistung und überträgt die Daten an den Wechselrichter. Der Wechselrichter regelt durch Ansteuerung des Ohmpilot eine zur Verfügung stehende Überschussenergie auf Null aus. Dies geschieht im Detail durch stufenlose Ansteuerung des angeschlossenen Heizstabes am Ohmpilot. Die Überschussenergie wird stufenlos mit dem Heizstab verbraucht.

Wenn kein Temperatursensor verbaut ist, muss eine Fremdquelle (z.B. Gastherme) für die Mindesttemperatur sorgen.

Als Alternative kann der Ohmpilot die Mindesttemperatur sicherstellen. Dazu muss ein Temperatursensor angeschlossen sein, sodass der Ohmpilot die Temperatur messen kann. Dadurch kann ein Netzbezug entstehen.

Die maximale Temperatur muss am Heizstab-Thermostat eingestellt werden. Verfügt der Heizstab über keinen Thermostat, kann diese Aufgabe alternativ auch der Ohmpilot übernehmen (siehe Kapitel **Optionale Einstellungen** auf Seite **50**).

3-phasiger Heizstab 900 W bis 9 kW



- (1) **EINGANG Zuleitung Netz** 3x 230 V, Federzug 1,5 2,5 mm²
- (2) AUSGANG Heizstab L3
- (3) **AUSGANG Heizstab L2**
- (4) **AUSGANG bis 3 kW** regelbar, max. 13 A, ohmsche Last, Federzug 1,5 2,5 mm²
- (5) Warmwasser Boiler
- (6) **Temperatursensor** PT1000
- (7) **Fremdquelle** (z.B. Gastherme)
- (8) Heizstab (max. 9 kW)
- (9) Fehlerstrom-Schutzschalter

(10) Leitungs-Schutzschalter max. B16A

(11) **Ferrit** (im Lieferumfang)

WICHTIG! Plug & Play - Bei dieser Anwendung sind nach erfolgreicher Verbindung zum Wechselrichter keine weiteren Einstellungen notwendig.

Der Fronius Smart Meter erfasst am Einspeisepunkt die aktuelle Leistung und überträgt die Daten an den Wechselrichter. Der Wechselrichter regelt durch Ansteuerung des Ohmpilot eine zur Verfügung stehende Überschussenergie auf Null aus. Dies geschieht im Detail durch stufenlose Ansteuerung des angeschlossenen Heizstabes am Ohmpilot. Die Überschussenergie wird stufenlos mit dem Heizstab verbraucht. Je nach Überschussleistung werden die einzelnen Phasen zu,- oder abgeschaltet und die restliche Leistung an L1 verbraucht. Dabei wird die Heizstableistung gedrittelt.

Wenn kein Temperatursensor verbaut ist, muss eine Fremdquelle (z.B. Gastherme) für die Mindesttemperatur sorgen.

Als Alternative kann der Ohmpilot die Mindesttemperatur sicherstellen. Dazu muss ein Temperatursensor angeschlossen sein, sodass der Ohmpilot die Temperatur messen kann. Dadurch kann ein Netzbezug entstehen.

Die maximale Temperatur muss am Heizstab-Thermostat eingestellt werden. Verfügt der Heizstab über keinen Thermostat, kann diese Aufgabe alternativ auch der Ohmpilot übernehmen (siehe Kapitel **Optionale Einstellungen** auf Seite **50**).

WICHTIG! Ein Heizstab mit ausgeführtem Neutralleiter ist notwendig.

1-phasiger Heizstab bis 3 kW mit Wärmepumpen-Ansteuerung

spiel 3



- (1) EINGANG - Zuleitung Netz 1x 230 V, Federzug 1,5 - 2,5 mm²
- (2) Multifunktions-Relaisausgang

WARNUNG!

Gefährliche Spannungen.

Ein Draht löst sich und berührt gefährliche Spannungen.

- Werden Signalkabel angeschlossen, müssen die einzelnen Drähte unmittelbar vor ► der Klemme mit einem Kabelbinder zusammengebunden werden.
- AUSGANG bis 3 kW regelbar, max. 13 A ohmsche Last, Federzug 1,5 2,5 mm² (3)

- (4) Warmwasser Boiler
- (5) **Temperatursensor** PT1000
- (6) **Wärmepumpe** mit SG Ready Steuereingang

HINWEIS!

Relaiskontakte können oxidieren.

Die Spannung muss mindestens 15V und der Strom mindestens 2mA betragen, damit die Relaiskontakte nicht oxidieren.

- (7) Heizstab (max. 3 kW)
- (8) Fehlerstrom-Schutzschalter
- (9) Leitungs-Schutzschalter max. B16A
- (10) **Ferrit** (im Lieferumfang)

Der Fronius Smart Meter erfasst am Einspeisepunkt die aktuelle Leistung und überträgt die Daten an den Wechselrichter. Der Wechselrichter regelt durch Ansteuerung des Ohmpilot eine zur Verfügung stehende Überschussenergie auf Null aus. Dies geschieht im Detail durch stufenlose Ansteuerung des angeschlossenen Heizstabes am Ohmpilot und durch gezieltes Zuschalten der Wärmepumpe.

Für die Ansteuerung muss die Wärmepumpe über einen Steuereingang (z.B. SG Ready oder EVU Freigabe) verfügen. Die Wärmepumpe kann z.B. vom Betriebszustand 2 (Normalbetrieb) in den Betriebszustand 3 (verstärkter Betrieb) geschalten werden, indem der Eingang 2 der Wärmepumpe mit dem Relais angesteuert wird. Die Wärmepumpe kann aber auch vom Betriebszustand 1 (EVU Sperre) in den Betriebszustand 2 (Normalbetrieb) geschalten werden, indem der Eingang 1 der Wärmepumpe mit dem Relais angesteuert wird.

Beschreibung und Auflistung von SG Ready Wärmepumpen finden Sie unter: http:// www.waermepumpe.de/normen-technik/sg-ready/sg-ready-datenbank/

Kleinere Überschüsse werden stufenlos mit dem Heizstab verbraucht. Ab einer gewissen Überschussleistung macht es Sinn die Wärmepumpe zu aktivieren, da diese eine höhere Effizienz hat (z.B. COP (Coefficient Of Performance) für Warmwasserbereitung bis 53°C = 2,5).

Die optimalen Schaltschwellen sind abhängig von

- der elektrischen Wärmepumpen-Leistung.
- der Einspeisevergütung und den Strom Bezugskosten.
- der Reduzierung der Anlaufzyklen der Wärmepumpe = Lebensdauererhöhung der Wärmepumpe.
- Thermische Verluste der Wärmepumpe und der Rohrleitungen.

Wenn kein Temperatursensor verbaut ist, muss die Wärmepumpe für die Mindesttemperatur sorgen. Als Alternative kann auch der Ohmpilot durch Ansteuerung der Wärmepumpe die Mindesttemperatur sicherstellen. Dadurch kann ein Netzbezug entstehen. Die maximale Temperatur muss am Heizstab-Thermostat und an der Wärmepumpe eingestellt werden. Verfügt der Heizstab über keinen Thermostat, kann diese Aufgabe alternativ auch der Ohmpilot übernehmen (siehe Kapitel **Optionale Einstellungen** auf Seite **50**).

Diese Funktion ist auch mit einem 3-phasigen Heizstab kombinierbar.

Einstellungen im Menübereich	Gronius OHMPILOT	ALLGEMEIN I	NETZWERK		DE
	ALLGEMEINE EIN	ISTELLUN	GEN		
	Bezeichnung	Ohmpilot			
	HEIZUNG 1				
	 automatisch 	O manuell			
	Verbraucher	1 phasig	÷	Leistung (W)	3000
	Temperatursensor vorhanden				
	HEIZUNG 2				
	Verbraucher	SG Ready Wärmep	umpe 🗘		
	Einschaltschwelle	Einspeisung	\$	3000 🕄	Leistung (W)
	Ausschaltschwelle	Bezug	\$	500 🗘	Leistung (W)
	Speichern				
	1 Website des Ohmp Unter Kapitel Date Webseite des Ohm	biloten öffnen nanbindung npiloten zu err	einrichte reichen is	<mark>en</mark> auf Seite 41 ist besc st.	hrieben, wie die
	2 Unter HEIZUNG 2	bei Verbraucł	her "SG F	Ready Wärmepumpe" a	uswählen
	3 Bei Einschaltschwe Watt eintragen, bei	elle "Einspeis der die Wärr	ung" ausv nepumpe	wählen und die gewüns e eingeschaltet werden	chte Leistung in soll.
	4 Bei Ausschaltschw Leistung in Watt ei	elle "Bezug" o ntragen, bei o	oder "Eins ler die Wa	speisung" auswählen u ärmepumpe abgeschal	nd die gewünschte tet werden soll.
	Beispiel 1: Wenn bei A 500 W, so wird die Wär	Ausschaltschv rmepumpe au	welle "Bez Isgeschal	zug" ausgewählt wurde ltet, sobald der Bezug 5	und bei Leistung 500 W übersteigt.

Beispiel 2: Wenn bei Ausschaltschwelle "Einspeisung" ausgewählt wurde und bei Leistung 500 W, so wird die Wärmepumpe ausgeschaltet, sobald die Einspeisung weniger als 500 W beträgt.

HINWEIS!

Die Wärmepumpe muss am selben Verrechnungszähler angeschlossen sein. Zwischen Ein.- und Ausschaltschwelle muss zusätzlich der Eigenverbrauch der Wärmepumpe berücksichtigt werden. Hat die Wärmepumpe beispielsweise 3000 Watt elektrischen Verbrauch und es soll wieder eine Hysterese von 500 Watt berücksichtigt werden, so kann die Einschaltschwelle auf Einspeisung 3000 Watt und die Ausschaltschwelle auf Bezug 500 Watt eingestellt werden.

31

DE

1-phasiger Heizstab bis 3 kW und Fremdquelle



- (1) **EINGANG Zuleitung Netz** 1x 230 V, Federzug 1,5 2,5 mm²
- (2) Multifunktions-Relaisausgang

WARNUNG!

Gefährliche Spannungen.

Ein Draht löst sich und berührt gefährliche Spannungen.

Werden Signalkabel angeschlossen, müssen die einzelnen Drähte unmittelbar vor der Klemme mit einem Kabelbinder zusammengebunden werden.

- (3) **AUSGANG bis 3 kW** regelbar, max. 13 A ohmsche Last, Federzug 1,5 2,5 mm²
- (4) Warmwasser Boiler
- (5) **Temperatursensor** PT1000
- (6) **Fremdquelle** (z.B. Gastherme)

HINWEIS!

Relaiskontakte können oxidieren.

Die Spannung muss mindestens 15V und der Strom mindestens 2mA betragen, damit die Relaiskontakte nicht oxidieren.

- (7) Heizstab (max. 3 kW)
- (8) Fehlerstrom-Schutzschalter
- (9) Leitungs-Schutzschalter max. B16A
- (10) **Ferrit** (im Lieferumfang)

Der Fronius Smart Meter erfasst am Einspeisepunkt die aktuelle Leistung und überträgt die Daten an den Wechselrichter. Der Wechselrichter regelt durch Ansteuerung des Ohmpilot eine zur Verfügung stehende Überschussenergie auf Null aus. Dies geschieht im Detail durch stufenlose Ansteuerung des angeschlossenen Heizstabes am Ohmpilot. Die Überschussenergie wird stufenlos mit dem Heizstab verbraucht.

Die Temperatur wird vom Ohmpilot gemessen. Wird die Mindesttemperatur unterschritten, dann wird eine Fremdquelle (z.B. Gastherme) solange angesteuert, bis die Mindesttemperatur wieder erreicht ist, sodass der Ohmpilot nur Überschussenergie verwendet und keine Energie vom Netz bezieht.

Die maximale Temperatur muss am Heizstab-Thermostat eingestellt werden. Verfügt der Heizstab über keinen Thermostat, kann diese Aufgabe alternativ auch der Ohmpilot übernehmen (siehe Kapitel **Optionale Einstellungen** auf Seite **50**).

Für die Legionellenschaltung wird der Heizstab verwendet.

Diese Funktion ist auch mit einem 3 phasigen Heizstab kombinierbar.

Einstellungen im Menübereich	fre	nnius	OHMPILOT	ALLGEMEIN	NETZWERK					DE
	ALLGEMEINE EINSTELLUNGEN									
	Bezeichnung			Ohmpilot						
	HEIZ	ZUNG 1								
	o aut	tomatisch		O manuell						
	Verbra	aucher		1 phasig	\$	Leistung (W)			300	0
	Temperatursensor vorhanden					enschutz (h)				
	Tagesverlauf anpassen						Temperatur			
	Zeit ab:		Zeit bis:		Mindesttemp	eratur:				
		06:00	©	11:00	C	45	٢	°C		
		11:00	C	13:00	C	50	٢	°C		
		13:00	C	21:00	C	45	٢	°C		
		21:00	©	06:00	C	40	٢	°C		
	HEIZUNG 2									
	Verbra	aucher		Fremdquelle anst	euern 🜲					
	Spe	eichern								
	1	Website de Unter Kap Webseite d	es Ohmp itel <mark>Date</mark> des Ohm	piloten öffner nanbindung npiloten zu e	n g einricht rreichen i	en auf Se st. " aktiviere	eite 41 is	st besc	hrieben, wi	e die
	3	Das Feld "	Tagesve	erlauf anpass	sen" aktivi	eren				

- Einstellungen unter "Zeit ab", "Zeit bis" und "Mindesttemperatur" wie gewünscht einstellen Nähere Infos im Kapitel Tagesverlauf anpassen auf Seite 51
- 5 Unter HEIZUNG 2 bei Verbraucher "Fremdquelle ansteuern" auswählen

Zwei Heizstäbe - 3-phasig und 1-phasig



- (1) **EINGANG Zuleitung Netz** 3x 230 V, Federzug 1,5 2,5 mm²
- (2) AUSGANG Heizstab L3
- (3) AUSGANG Heizstab L2
- (4) Multifunktions-Relaisausgang
- (5) AUSGANG bis 3 kW regelbar, max. 13 A ohmsche Last, Federzug 1,5 2,5 mm²
- (6) Warmwasser Boiler
- (7) **Temperatursensor** PT1000
- (8) **Fremdquelle** (z.B. Gastherme)
- (9) Heizstab 1 (max. 3 kW)

- (10) Puffer
- (11) **Heizstab 2** (max. 9 kW)
- (12) Fehlerstrom-Schutzschalter
- (13) Leitungs-Schutzschalter max. B16A
- (14) **Ferrit** (im Lieferumfang)

Viele Heizsysteme bestehen aus einem Boiler und einem Puffer, wobei die Zentralheizung den Puffer speist und eine Steuerung den Warmwasserboiler über eine Pumpe belädt. Wie bei thermischen Solaranlagen kann auch der Ohmpilot zuerst den Warmwasserboiler erhitzen und dann den Puffer, sodass eine maximale PV Überschussenergie gespeichert werden kann.

Der Fronius Smart Meter erfasst am Einspeisepunkt die aktuelle Leistung und überträgt die Daten an den Wechselrichter. Der Wechselrichter regelt durch Ansteuerung des Ohmpilot eine zur Verfügung stehende Überschussenergie auf Null aus. Dies geschieht im Detail durch stufenlose Ansteuerung des angeschlossenen Heizstabes am Ohmpilot.

Bei dieser Anwendung werden zwei Heizstäbe verbaut, wobei bevorzugt der erste Heizstab (9) angesteuert wird. Erst wenn die max. Temperatur im Boiler (6) erreicht ist, wird der zweite Heizstab stufenlos angesteuert, sodass die Restenergie z.B. in einem Puffer eingespeichert wird.

Wenn kein Temperatursensor am Ohmpilot angeschlossen ist, versucht der Ohmpilot nach 30 Minuten wieder Energie über den ersten Heizstab abzugeben. Ist ein Temperatursensor vorhanden, wird ab einer Temperaturdifferenz von 8°C (auf die vor dem Umschalten gemessene Temperatur) wieder auf den ersten Heizstab zurückgeschaltet.

Diese Schaltung kann auch für eine Schichtung in einem Boiler/Puffer verwendet werden, sodass im oberen Bereich des Boilers mit wenig Energie die max. Temperatur erreicht wird und die restliche Energie im unteren Bereich des Boilers gespeichert wird. Durch die Schichtung in einem Speicher kann auch wesentlich mehr Energie gespeichert werden, da normalerweise im oberen Bereich des Boilers eine Mindesttemperatur gehalten wird. Dadurch ist die Temperaturdifferenz und somit die Energiemenge eher klein. Im unteren Bereich des Boilers kann eine hohe Temperaturdifferenz von z.B. 50°C genutzt werden.

Sowohl der erste als auch der zweite Heizstab können 1- oder 3-phasig sein. Für zwei 3phasige Heizstäbe siehe **Anwendungsbeispiel 6**. Wenn kein Temperatursensor verbaut ist, muss eine Fremdquelle (z.B. Gastherme) für die Mindesttemperatur sorgen.

Als Alternative kann auch der Ohmpilot die Mindesttemperatur sicherstellen. Dadurch kann ein Netzbezug entstehen. Die maximale Temperatur muss am Heizstab-Thermostat eingestellt werden. Verfügt der Heizstab 1 (9) über keinen Thermostat, kann diese Aufgabe alternativ auch der Ohmpilot übernehmen (siehe Kapitel **Optionale Einstellungen** auf Seite **50**). Der Heizstab 2 (11) muss aber unbedingt über einen Thermostat verfügen.

HINWEIS!

Gleichzeitig heizen.

Es können zu keinem Zeitpunkt beide Heizstäbe zugleich geheizt werden!
Einstellungen im Menübereich	(Fronius)	OHMPILOT	ALLGEMEIN	NETZWERK		D	E
	ALLGEME	NE EIN	STELLUI	NGEN			
	Bezeichnung		Ohmpi	lot			
	HEIZUNG 1						
	 automatisch 	(manuell				
	Verbraucher		1 phasig	*	Leistung (W)	3000	
	Temperatursensor v	orhanden					
	HEIZUNG 2						
	Verbraucher		3 phasig	\$	Leistung (W)	4500 Q	l
	Speichern						-
	1 Website de Unter Kapi Webseite de	es Ohmpi tel <mark>Dater</mark> des Ohm	iloten öffne nanbindun piloten zu e	n g einrich t erreichen i	ten auf Seite 41 ist b ist.	eschrieben, wie die	

- 2 Unter HEIZUNG 1 "manuell" und "1 oder 3 phasig" auswählen
- 3 Unter HEIZUNG 2 "1 oder 3 phasig" auswählen und die Leistung des Verbrauchers eingeben

Zwei 3-phasige Heizstäbe bis 9 kW



- (1) **EINGANG Zuleitung Netz** 3x 230 V, Federzug 1,5 2,5 mm².
- (2) AUSGANG Heizstab L3
- (3) AUSGANG Heizstab L2
- (4) Multifunktions-Relaisausgang
- (5) **AUSGANG bis 3 kW** regelbar, max. 13 A ohmsche Last, Federzug 1,5 2,5 mm²
- (6) Schütz Umschaltung
- (7) Warmwasser Boiler
- (8) **Temperatursensor** PT1000
- (9) **Fremdquelle** (z.B. Gastherme)
- (10) Heizstab 1 (max. 9 kW)
- (11) Puffer
- (12) Heizstab 2 (max. 9 kW)
- (13) Fehlerstrom-Schutzschalter

(15) **Ferrit** (im Lieferumfang)

Viele Heizsysteme bestehen aus einem Boiler und einem Puffer, wobei die Zentralheizung den Puffer speist und eine Steuerung den Warmwasserboiler über eine Pumpe belädt. Wie bei thermischen Solaranlagen kann auch der Ohmpilot zuerst den Warmwasserboiler erhitzen und dann den Puffer, sodass eine maximale PV Überschussenergie gespeichert werden kann.

Der Fronius Smart Meter erfasst am Einspeisepunkt die aktuelle Leistung und überträgt die Daten an den Wechselrichter. Der Wechselrichter regelt durch Ansteuerung des Ohmpilot eine zur Verfügung stehende Überschussenergie auf Null aus. Dies geschieht im Detail durch stufenlose Ansteuerung des angeschlossenen Heizstabes am Ohmpilot.

Bei dieser Anwendung werden zwei Heizstäbe verbaut, wobei bevorzugt der erste Heizstab (10) angesteuert wird. Erst wenn die max. Temperatur im Boiler (7) erreicht ist, wird der zweite Heizstab (12) stufenlos angesteuert, sodass die Restenergie z.B. in einem Puffer eingespeichert wird.

Wenn kein Temperatursensor am Ohmpilot angeschlossen ist, versucht der Ohmpilot nach 30 Minuten wieder Energie über den ersten Heizstab abzugeben. Ist ein Temperatursensor vorhanden, wird ab einer Temperaturdifferenz von 8°C (auf die vor dem Umschalten gemessene Temperatur) wieder auf den ersten Heizstab zurückgeschaltet.

Diese Schaltung kann auch für eine Schichtung in einem Boiler/Puffer verwendet werden, sodass im oberen Bereich des Boilers mit wenig Energie die max. Temperatur erreicht wird und die restliche Energie im unteren Bereich des Boilers gespeichert wird. Durch die Schichtung in einem Speicher kann auch wesentlich mehr Energie gespeichert werden, da normalerweise im oberen Bereich des Boilers eine Mindesttemperatur gehalten wird, ist die Temperaturdifferenz und somit die Energiemenge eher klein. Im unteren Bereich des Boilers kann eine hohe Temperaturdifferenz von z.B. 50°C genutzt werden.

Die Umschaltung muss durch einen externen Schütz realisiert werden. Wenn kein Temperatursensor verbaut ist, muss eine Fremdquelle (z.B. Gastherme) für die Mindesttemperatur sorgen.

Als Alternative kann auch der Ohmpilot die Mindesttemperatur sicherstellen. Dadurch kann ein Netzbezug entstehen.

Die maximale Temperatur muss am Heizstab-Thermostat eingestellt werden. Verfügt der Heizstab 1 (10) über keinen Thermostat, kann diese Aufgabe alternativ auch der Ohmpilot übernehmen (siehe Kapitel **Optionale Einstellungen** auf Seite **50**). Der Heizstab 2 (12) muss aber unbedingt über einen Thermostat verfügen.

HINWEIS!

Gleichzeitig heizen.

Es können zu keinem Zeitpunkt beide Heizstäbe zugleich geheizt werden!

ALLGEMI	EINE EINSTELLUI	NGEN	
Bezeichnung	Ohmpi	lot	
HEIZUNG 1			
 automatisch 	manuell		
Verbraucher	3 phasig	Leistung (W)	3000
Temperatursens	or vorhanden		
HEIZUNG 2			
Verbraucher	3 phasig	Leistung (W)	3000

Webseite des Ohmpiloten zu erreichen ist.
 Unter HEIZUNG 2 "3 phasig" auswählen und die Leistung des Verbrauchers eingeben

Datenanbindung einrichten

Mögliche Kommunikationswege

Die Datenanbindung ist für die Kommunikation zwischen Wechselrichter und Ohmpilot notwendig. Hauptsächlich sendet der Wechselrichter Vorgabewerte an den Ohmpiloten. Für manche Anwendungen ist es notwendig, Einstellungen über die Webseite des Ohmpiloten vorzunehmen.



Es gibt 3 mögliche Kommunikationswege:

- Modbus RTU (über RS 485)
- LAN (Ethernet)
- WLAN

HINWEIS!

Mindest Software Version.

Ein Wechselrichter der SnapInverter-Serie (Datamanager 2.0) muss mindestens die Software Version 3.8.1-x haben.

Wechselrichter mit Ohmpilot koppeln

Jeder Wechselrichter mit Fronius Smart Meter koppelt sich automatisch mit dem Ohmpilot. Wenn jedoch mehr als ein Wechselrichter mit Fronius Smart Meter im Netzwerk vorhanden ist, ist es möglich dass sich der falsche Wechselrichter koppelt. In diesem Fall kann der Ohmpilot auf der Webseite des zu koppelnden Wechselrichters unter Systeminformationen manuell gekoppelt werden.

Informationen wie die Webseite des Wechselrichters erreicht werden kann sind in der Bedienungsanleitung "Fronius Datamanager 2.0" zu finden.

			Komponenten			
			Inverter			
Nr	Gerätetyp		PMC	Seriennummer		
1	Fronius Symo 4.	5-3-S 25	451000700930 <mark>316 4,071,334 0</mark>			
			Zähler			
Nr	Gerät	etyp	Zählerpo	Zählerposition		
1	Smart Me	eter 63A	Einspeisepunkt (Primärzähler)	15060034	
		10	OhmPilot			
Nr	Seriennummer	Softwareversi	on Hardwareversion	Gekoppelt mit	Koppeln	
1	28136344	61	3	239.3218	Koppeln	

Verbindung über Modbus RTU einrichten

1 Busverkabelung (B) am Ohmpilot anschließen.

Die Busverkabelung erfolgt parallel über die Kabel TX+, TX- und GND mit dem Fronius Smart Meter und dem Fronius Wechselrichter oder Datamanager 2.0.

- Busverkabelung mit einem Widerstand am ersten und letzten Gerät abschließen. Am Ohmpilot kann der Widerstand mit dem DIP Schalter Nummer 5 aktiviert werden. Siehe (A).
- 3 Modbus Adresse mithilfe der Nummern 1-3 einstellen. Default Adresse: 40 (Für zukünftige Anwendungen kann die Modbus Adresse über die DIP-Schalter am Ohmpilot verändert werden.)



(A) DIP Schalter

DIP 1-3 = Modbusadresse BCD DIP 4 = Reserve DIP 5 = Abschlusswiderstand (120 Ohm)

HINWEIS!

Verwechslung der Kabel vermeiden. Verwenden Sie ein Datenkabel welches sich klar vom Netzkabel unterscheidet, sodass es zu keiner Verwechslung kommt und Personenschaden sowie Sachschaden vermieden werden.

HINWEIS!

Fehlerhafte Verkabelung. Wird durch 1x blinken der roten LED Anzeige signalisiert.



Um diverse Einstellungen vorzunehmen, muss die WLAN Verbindung geöffnet werden:

1 Die Taste am Ohmpilot 2x drücken.

Die blaue LED blinkt (zweimal), solange der WLAN Access Point aktiv ist (30 Minuten). Bevor der Access Point geöffnet wird, wird nach verfügbaren WLAN Netzen gesucht.

2 Auf Ihrem Smart Device oder PC das WLAN Netz "Ohmpilot" aktivieren.

3 Im Browser die Webseite http://192.168.250.181 oder http://ohmpilotW.local eingeben. Alternativ kann der Ohmpilot auch mit der Fronius Solar Web App im Netzwerk gesucht werden.

HINVVEIS!	
Ohmpilot über Netzwerk err	eichen.
In Netzwerken mit einem DNS	S-Suffix ist der Ohmpilot unter http://ohmpilotW. <dns-suf-< td=""></dns-suf-<>
fix> zu erreichen. z.B. http://o	hmpilotW.fronius.com

Verbindung überStandardmäßig bezieht der Ohmpilot seine IP Adresse automatisch vom DHCP Server,LAN einrichtensodass grundsätzlich keine Einstellungen notwendig sind.

Der Wechselrichter sucht den Ohmpilot automatisch, wobei der Suchvorgang bis zu 5 Minuten dauern kann. Wenn die rote LED dunkel ist und die grüne LED blinkt, arbeitet der Ohmpilot korrekt.

Über das Webinterface kann dem Ohmpilot eine statische IP Adresse eingestellt werden.

Fronius OH	IMPILOT	ALLGEMEIN	NETZWERK		DE
NETZWERK	EINRIG	CHTEN			
LAN					
Adresse beziehen	0	statisch 🔾	dynamisch		
IP-Adresse	1	92.168.1.16			
Subnet-Mask	2	55.255.255.0			
Gateway	1	92.168.1.1			
Speichern					

1 Website http://ohmpilotL.local öffnen

Alternativ kann auch die vom DHCP Server vergebene IP Adresse ausgelesen werden. Beinahe jeder Router zeigt seine verbundenen Geräte (Clients) auf seinem Webinterface an. Auch Apps wie z.B. Fing können dabei helfen die automatisch zugewiesene IP Adresse zu finden. Alternativ kann der Ohmpilot auch mit der Fronius Solar Web App im Netzwerk gesucht werden.

HINWEIS!

Ohmpilot über Netzwerk erreichen.

In Netzwerken mit einem DNS-Suffix ist der Ohmpilot unter http://ohmpilotL.<DNS-Suffix> zu erreichen. z.B. http://ohmpilotL.fronius.com

Um die IP Adresse manuell einzustellen muss die Option "statisch" ausgewählt sein. Geben Sie anschließend die gewünschte IP Adresse ein.

Der Ohmpilot ist somit über http://ohmpilotL.local oder der fix vergebenen IP Adresse erreichbar.

Verbindung überEs gibt zwei Möglichkeiten, den Ohmpilot in ein vorhandenes WLAN Netzwerk zu verbin-WLAN einrichtenden:

Verbindung über WPS (WiFi Protected Setup)

- **1** Die Taste am Ohmpilot 1x drücken.
 - Die blaue LED blinkt (einmal) solange WPS aktiv ist.
- Die WPS Taste am Router innerhalb 2 Minuten drücken. Wenn die blaue LED am Ohmpiloten dauerhaft leuchtet, war die Verbindung ins Netz erfolgreich.

Der Wechselrichter sucht den Ohmpilot automatisch, wobei der Suchvorgang bis zu 5 Minuten dauern kann. Wenn die rote LED dunkel ist und die grüne LED blinkt, arbeitet der Ohmpilot korrekt.

Fronius	OHMPILOT	ALLGEMEIN	NETZWERK			DE
NETZWE	RK EINRI	CHTEN				
○ LAN				• WLAN		
				Gefundene Netzwerke		C
			Netzwerk auswählen WLAN==> Signal: -50, sec:wp	a		
				Adresse beziehen	⊖ statisch	 dynamisch
				IP-Adresse	0.0.0.0	
				Speichern & Verbinden		

Verbindung über Access Point und manuelle Konfiguration der WLAN Einstellungen

- 1 Die Taste am Ohmpilot 2x drücken.
 - Die blaue LED blinkt (zweimal), solange der WLAN Access Point aktiv ist (30 Minuten). Bevor der Access Point geöffnet wird, wird nach verfügbaren WLAN Netzen gesucht.
- 2 Auf Ihrem Smart Device oder PC das WLAN Netz "Ohmpilot" aktivieren.
- 3 Im Browser die Webseite http://192.168.250.181 oder http://ohmpilotW.local eingeben. Alternativ kann der Ohmpilot auch mit der Fronius Solar Web App im Netzwerk gesucht werden.
- [4] Im Register Netzwerk WLAN das gewünschte Netzwerk auswählen.

HINWEIS!

Gewünschtes Netzwerk nicht aufgelistet.

Ist das gewünschte WLAN Netzwerk nicht aufgelistet, den Access Point Modus durch erneutes Drücken der Taste beenden und den Vorgang wiederholen

 "Speichern & Verbinden" klicken, WLAN Passwort eingeben.
 Wenn die blaue LED am Ohmpiloten dauerhaft leuchtet, war die Verbindung ins Netz erfolgreich.
 Der Wechselrichter sucht den Ohmpilot automatisch, wobei der Suchvorgang bis zu

5 Minuten dauern kann. Wenn die rote LED dunkel ist und die grüne LED blinkt arbeitet der Ohmpilot korrekt.

HINWEIS!

WLAN Netz Scan nicht möglich.

Wenn der Access Point geöffnet ist, ist ein Scannen der WLAN Netze nicht möglich.

Über das Webinterface kann dem Ohmpilot eine statische IP Adresse eingestellt werden.

Der Ohmpilot ist somit über http://ohmpilotW.local oder der fix vergebenen IP Adresse erreichbar. Alternativ kann der Ohmpilot auch mit der Fronius Solar Web App im Netzwerk gesucht werden.

HINWEIS!

Gerät-Verbindungen.

Es kann sich nur ein Gerät mit dem Ohmpilot verbinden.

HINWEIS!

Ohmpilot über Netzwerk erreichen.

In Netzwerken mit einem DNS-Suffix ist der Ohmpilot unter http:// ohmpilotW.<DNS-Suffix> zu erreichen. z.B. http://ohmpilotW.fronius.com

Weboberfläche des Ohmpilots

Webinterface

Status Anzeigen am Webinterface	Gronius Ohmpilot Allo	Gemein Netzwerk	DE
	\$	L	©
	OK	25.4 °C	0 W
	STATUS	TEMPERATUR	HEIZLEISTUNG
	HEIZUNG 2 🗙	HEIZSTAB L2 🗙	HEIZSTAB L3 🚫
	MODELL:	Ohmpilot	
	SERIENNUMMER:	27193283	
	SOFTWAREVERSION:	1.0.11-1	
	PLATINENVERSION CONTR.:	3	
	PLATINENVERSION CHOP.:	0	
	LAN IP-ADRESSE:	192.168.1.126	The second second
	LAN SUBNET-MASK:	255.255.255.0	
	LAN MAC-ADRESSE:	00:04:A3:80:F3:E6	
	WLAN IP-ADRESSE:	192.168.1.127	
	WLAN MAC-ADRESSE:	F8:F0:05:F4:AF:85	
	RS485 ADRESSE:	40	
	PAIRING:		
	UHRZEIT:	20:54 13.04.2017	
	REGLERAUSGANG:	0 W	

Status

ОК	Ohmpilot arbeitet im Normalbetrieb.
Mindesttemperatur	Mindesttemperatur wurde unterschritten. Heizung 1 heizt mit 100%.
Legionellenschutz	Legionellenaufheizung ist aktiv. Heizung 1 heizt mit 100%.
Boost	Der Ohmpilot wurde manuell in den Boostmode versetzt. Hei- zung 1 heizt mit 100%.
Fehler	Ein Fehler wurde erkannt. Nähere Infos sind über Solar Web auszulesen.
Temperatur	Aktuell gemessene Temperatur. Ein gültiger Wert wird nur mit einem angeschlossenen Temperatursensor angezeigt.
Heizleistung	Aktuell vom Ohmpilot verbrauchte Leistung.
Heizung 2	Heizung 2 ist aktiv. Heizung 2 kann ein zweiter Heizstab, eine Wärmepumpe oder eine Fremdquelle (z.B. Gastherme) sein.
Heizstab L2	Phase 2 vom 3-phasigen Heizstab ist aktiv.
Heizstab L3	Phase 3 vom 3-phasigen Heizstab ist aktiv.

Optionale Einstellungen

Manuelle Einstellungen HEIZUNG 1

HINWEIS!

Einstellungen nicht zwingend notwendig.

Die hier beschriebenen Einstellungen können für alle zuvor dargestellten Anwendungsbeispiele vorgenommen werden. Wenn sie nicht beim jeweiligen Beispiel beschrieben sind, sind diese nicht zwingend notwendig.

3ezei	ichnung		Ohmp	bilot						
HEI	ZUNG 1									
automatisch o manuell			Heizstab ausmessen			O .				
/erbr	aucher		3 phasig	*	Leistung (W)			3000		
Temperatursensor vorhanden			Legionellenschutz (h)			168				
a Ta	igesverlauf anpa	assen			🗹 Maximal 1	Temperatur		60	٢	
Zeit a	ib:		Zeit bis:		Mindesttemp	eratur:				
	03:00	C	05:00	C	45	٢	°C			
	16:00	C	18:00	C	45	٢	°C			
	20:28	Ŀ	20:29	©	52	0	°C			
	20:25	G	20:26	C	53	٢	°C			
HEI	ZUNG 2									

1 Unter HEIZUNG 1 "manuell" auswählen

- 2 "1-phasigen" oder "3-phasigen" Verbraucher auswählen
- 3 Leistung des Verbrauchers eingeben

HINWEIS!

Heizstab 1 automatisch vermessen ist nicht möglich.

Bei Anwendungen mit einem 1 und einem 3 phasigen Heizstab ist es dem Ohmpiloten auf Grund der Verkabelung nicht möglich den Heizstab 1 automatisch zu vermessen. In diesem Fall muss die Konfiguration manuell erfolgen.

Legionellen-
schutz aktivierenIst der Legionellenschutz aktiviert, wird das Warmwasser im eingestellten Intervall auf
60°C erhitzt.

- 1 Das Feld "Temperatursensor vorhanden" aktivieren
- 2 Das Feld "Legionellenschutz (h)" aktivieren
- 3 Den gewünschten Zyklus für den Legionellenschutz eingeben

HINWEIS!

	Wird kein Hygienespeicher verwendet, müssen Maßnahmen getroffen werden, um Legionellen abzutöten. Wenn der Boiler in einem längeren Zeitintervall mit einer Temperatur <60°C betrieben wird und kein Hygienespeicher verwendet wird, sind Maßnahmen zu treffen um die Legionellen abzutöten. Für den privaten Bereich wird empfohlen, zumindest einmal wöchentlich (168h) den Legionellenschutz durchzuführen. Im Falle eines großen Warmwasserspeichers oder einem verhältnismäßig geringen Warmwasserverbrauch, sollte der Legionellenschutz regelmäßig durchgeführt werden. Für diese Funktion ist ein PT1000 Temperatursensor notwendig, welcher von Fronius unter der Artikelnummer 43,0001,1188 bezogen werden kann.			
	Trotz eingestellter Funktion "Legionellenschutz" ist eine Verunreinigung des Wassers mit Legionellen nicht garantiert ausgeschlossen .			
Tagesverlauf anpassen	Diese Funktion sorgt dafür, dass eine gewünschte Temperatur nicht unterschritten wird. Wenn nicht ausreichend Überschussleistung vorhanden ist, wird - falls aktiviert - die Fremdquelle angesteuert oder ansonsten Strom vom Netz bezogen, um eine Mindest- temperatur sicher zu stellen.			
	Es können bis zu vier Zeiten definiert werden, sodass z.B. nur Abends höhere Warm- wassertemperaturen sicher zur Verfügung stehen, unter Tags aber mehr Potential für den Überschuss möglich ist, indem die Mindesttemperatur niedriger gewählt wird.			
	Tagesverlauf anpassen:			
	Image: Description of the second s			
	 Das Feld "Tagesverlauf anpassen" aktivieren 			
	Uhrzeit unter "Zeit ab" eintragen, ab wann der Ohmpilot auf die neue Mindesttemperatur zu heizen beginnen soll.			
	Uhrzeit unter "Zeit bis" eintragen, bis wann der Ohmpilot auf die Mindesttemperatur heizen soll.			
	5 Unter "Mindesttemperatur" die gewünschte Endtemperatur an			
	HINWEIS!			
	Zeitbereiche überschneiden sich. Wenn sich Zeitbereiche überschneiden, wird die höhere Temperatur verwendet, sodass z.B. eine Grundtemperatur von 40°C für den ganzen Tag eingestellt werden kann und zu gewissen Zeiten auf 50°C erhöht wird.			

HINWEIS!

Undefinierte Zeitbereiche.

Werden Zeitbereiche nicht definiert, dann wird in dieser Zeit nicht über das Netz oder die Fremdquelle geheizt, sondern nur mit PV Überschuss.

HINWEIS!

Primäre Heizquelle.

Handelt es sich bei der Heizung 1 um die primäre Heizquelle, so ist der Tagesverlauf jedenfalls anzupassen, um die gewünschte Mindest temperatur sicherzustellen. Für diese Funktion ist ein PT1000 Temperatursensor notwendig, welcher von Fronius unter der Artikelnummer 43,0001,1188 bezogen werden kann. Die Position des Temperaturfühlers im Boiler sollte so gewählt werden, dass ausreichend Warmwasser verfügbar ist. Er muss aber jedenfalls über dem Heizstab / Fremdquelle montiert werden.

Beispiel 1: 03:00 - 05:00 Uhr 45°C => Damit morgens um 6:00Uhr Warmwasser zum Duschen zur Verfügung steht. Nachdem Duschen, soll das Warmwasser nur mehr mit Überschuss-Energie produziert werden. 16:00 - 18:00 Uhr 45°C => War nicht ausreichend Überschuss Energie vorhanden, wird das Warmwasser zum Duschen nachgeheizt. Nach dem Duschen soll nicht mehr nachgeheizt werden, damit die Wärmeverluste gering gehalten werden.

Temperaturbegrenzung

Verfügt die Heizung 1 über kein einstellbares Thermostat, kann mit dieser Funktion die Temperatur begrenzt werden.

- **1** Das Feld "Temperatursensor vorhanden" aktivieren
- 2 Das Feld "Temperaturbegrenzung" aktivieren
- 3 Maximale Temperatur (z.B.: 60° C) eingeben

HINWEIS!

Diese Funktion ist nur für die Heizung 1 möglich.

Ist als Heizung 2 ein zweiter Heizstab in Verwendung, muss dieser über ein Thermostat ver fügen. Für diese Funktion ist ein PT1000 Temperatursensor notwendig, welcher von Fronius unter der Artikelnummer 43,0001,1188 bezogen werden kann. Die Position des Temperaturfühlers sollte knapp über dem Heizstab liegen, sodass das zufließende Kaltwasser sofort wieder erhitzt und somit die maximale Speichermenge genutzt wird.

Anhang

Statusmeldungen

Statusmeldungen Feh

en Fehlerversand

-

- Fehler werden im Datamanager 2.0 gespeichert und können über Solar Web versendet werden.
 - Mögliche Fehlerausgaben (Stand 7.12.2015):

Code	Beschreibung	Ursache	Behebung
906	Heizstab 1 defekt - Kurz- schluss L1	Die Last auf L1 ist höher als 3 kW. Kurz- schluss auf L1.	Heizstab 1 überprüfen. Verkabelung prüfen.
907 908	HS 1 - Überlast auf L2 HS 1 - Überlast auf L3	Strom auf L2 größer als 16 A Strom auf L3 größer als 16	HS 1 überprüfen und gegebenenfalls HS aus- tauschen.
909 910 911	HS 1 defekt - L1 hochoh- mig HS 1 defekt - L2 hochoh- mig HS 1 defekt - L3 hochoh- mig	Es fließt kein Strom durch L1/L2/L3. L1/L2/L3 von HS 1 defekt. Phase L1/L2/L3 unterbrochen.	L1/L2/L3 überprüfen. Anschlüsse L1/L2/L3 überprüfen.
912	HS 2 defekt - Kurzschluss L1	Die Last auf L1 ist höher als 3 kW. Kurz- schluss auf L1.	HS 2 überprüfen. Verka- belung prüfen.
913 914	HS 2 - Überlast auf L2 HS 2 - Überlast auf L3	Strom auf L2 größer als 16 A Strom auf L3 größer als 16 A	HS2 überprüfen und gegebenenfalls HS aus- tauschen.
915 916 917	HS 2 defekt - L1 hochoh- mig HS 2 defekt - L2 hochoh- mig HS 2 defekt - L3 hochoh- mig	Es fließt kein Strom durch L1/L2/L3. L1/L2/L3 von HS 2 defekt. Phase L1/L2/L3 unterbrochen.	L1/L2/L3 überprüfen. Anschlüsse L1/L2/L3 überprüfen.
918 919	Relais 2 defekt Relais 3 defekt	Relais R2/R3 steckt.	Ohmpilot austauschen.
920	TS Kurzschluss	Eingangswiderstand TS kleiner als 200 Ohm. Kein PT1000 TS angeschlossen. TS defekt.	Kabel und Anschlüsse am TS-Kabel überprüfen. TS austauschen.
921	TS nicht angeschlossen oder defekt	Kein TS verbunden (Eingangswiderstand größer als 2000 Ohm). TS ist aktiviert (sollte deaktiviert sein). TS-Kabel defekt. TS defekt. Kein PT1000 TS angeschlos- sen.	TS mit Gerät verbinden. TS über die Website deaktivieren (wenn kein Sensor benötigt). TS Kabel überprüfen. TS aus- tauschen.
922 923	60°C für Legionellen- schutz konnte innerhalb von 24h nicht erreicht wer- den. Mindesttemperatur konnte innerhalb von 5h nicht erreicht werden	FQ ist ausgeschaltet/defekt. (nur 922). TS wurde falsch montiert. Heizsystem falsch dimensioniert (zu viel Warmwasserver- brauch,etc) HS/TS defekt.	FQ einschalten (nur 922). TS über dem HS (im Schutzrohr) montieren. Legionellenschutz über die Website deaktivieren. HS/TS austauschen.

924	FQ konnte Mindesttempe- ratur innerhalb von 5h nicht erreichen.	FQ ausgeschalten/defekt. FQ mit Ohmpi- lot nicht verbunden. TS falsch montiert. Heizsystem falsch dimensioniert (zu viel Warmwasserverbrauch, etc.) TS defekt.	FQ einschalten. FQ mit Relais 1 verbinden. TS über dem Heizregister der FQ montieren. Mindest- temperatureinstellung überprüfen. TS austau- schen.
925	Uhrzeit nicht synchroni- siert	Uhrzeit in den letzten 24h nicht synchroni- siert. Router wurde ausgeschaltet/umkon- figuriert.	Verbindung zwischen Ohmpilot und Wechsel- richter prüfen. Router ein- schalten. Netzwerkeinstel- lungen kontrollieren.
926	Keine Verbindung mit Wechselrichter	Keine Verbindung zw. WR und Ohmpilot. WR ausgeschaltet. Der Ohmpilot braucht auch nachts eine Verbindung zum WR. Router abgeschaltet/defekt/umkonfigu- riert. Nachtabschaltung am Wechselrichter aktiviert. Schlechte WLAN Verbindung vom Wechselrichter oder Ohmpilot zum Router.	Verbindung überprüfen. WR einschalten. Software updaten. Ohmpilot und WR auseinschalten. Die Nachtabschaltung des WR muss deaktiviert wer- den. Am Display des WR im Menu "SETUP/ Display Einstellungen/Nachtmo- dus" den Nachtmodus auf ON stellen. Router ein- schalten. WLAN Antenne besser positionieren. Netzwerkeinstellungen kontrollieren.
927	Ohmpilot Übertemperatur	Umgebungstemperatur zu hoch (>40°C). Heizstab hat zu viel Leistung Lüftungs- schlitze verdeckt.	Ohmpilot an einem kühle- ren Ort installieren. Heiz- stab mit zulässiger Leis- tung verwenden. Lüftungsschlitze frei machen.
928	Ohmpilot Untertemperatur	Umgebungstemperatur zu niedrig (<0°C).	Ohmpilot an einem wärmeren Ort installieren. Die Installation im Außenbereich ist nicht erlaubt!
	FI löst aus	N und L vertauscht.	N und L richtig anschließen.
	Ohmpilot verbraucht kei- nen Überschuss	Thermostat am Heizstab hat abgeschaltet. Sicherheitstermostat (STC) am Heizstab hat ausgelöst.	Warten bis Thermostat wieder einschaltet.Sicher- heitsthermostat zurück setzen
	Ohmpilot verbraucht nur einen Teil der Überschuss- leistung	Heizstableistung ist geringer als Über- schussleistung.	ggf. größeren Heizstab wählen
	Leistung am Einspeise- punkt ist nicht immer auf 0 ausgeregelt	Last, und Erzeugungsschwankungen brauchen einige Sekunden Zeit zum aus- regeln.	
	Nach dem Einschalten blinkt die grüne LED dau- erhaft 2 mal	Thermostat am Heizstab hat abgeschaltet. Heizstab ist nicht angeschlossen.	Thermostat kurzzeitig für die Leistungsmessung hochdrehen. Heizstab anschließen.

Nach einem Stromausfall arbeitet der Ohmpilot nicht mehr	Der Ohmpilot weist sich nach einem Stromausfall, sofern er keine IP Adresse nach 40s bekommt, automatisch eine fixe IP Adresse zu 169.254.0.180 (nur gültig wenn der Ohmpilot via WLAN am Router angebunden ist).	Ohmpilot Neustarten, damit die WLAN Verbin- dung neu aufgebaut wird.
--	--	--

HS=Heizstab TS=Temperatursensor WR=Wechselrichter FQ=Fremdquelle (z.B. Gastherme)

Technische Daten

Eingangsdaten	Frequenz Nennspannung Max. Eingangsstrom	50 Hz 230 V / 400 V 1 X 16 A / 3 x 16 A
Schnittstellen	Modbus RTU LAN WLAN Temperatursensor	RS 485, max 1000m, geschirmt und ver- drillt Ethernet mind. CAT5, geschirmt IEEE 802.11 b/g/n PT1000 (max. 30m)
Ausgangsdaten	Analog Out 1-phasig / 3-phasig Nennstrom Analog pro Phase Kurzschlussstrom Analog Out Max. Strom Relais Out Multifunktionsrelais Out Wirkungsgrad im Nennbetrieb Verbrauch im Standby	stufenlos 0 - 3 / 0 - 9 kW 13 A 16 A (max. 5 Sek.) L2 / L3 16A (max. 5 Sek.) min. 15V / 2mA ; max. 16 A (max. 5 Sek.) mind. 98% typ. 1,8 W
Allgemeine Daten	Abmessungen (Höhe x Breite x Tiefe) Gewicht Schutzart Montage Umgebungstemperatur-Bereich Zulässige Luftfeuchtigkeit Kühlung Lagertemperatur EMV Emissionsklasse Überspannungskategorie Verschmutzungsgrad	340mm x 270mm x 123mm 3,9 kg IP54 Wand 0 bis 40°C 0-99% (nicht kondensierend) Konvektion -40 bis 70°C B 3 3

Prüfungen / Angaben

Prüfungen/Angaben Prüfungen / Angaben laut EN60730 Abschnitt 1 Tabelle 7.2

6a	Konstruktion	Elektronische RS 2.5.5 unabhängig montiertes RS
19	Schraubenlose Klemmen	2.10.6.1 Befestigungsart Typ X
24	Einteilung des RS, nach Schutz gegen elektrischen Schlag Abschnitt 6.8	Schutzklasse I 6.8.3
29	Art der Abschaltung oder Unterbre- chung für jeden Stromkreis	Micro Unterbrechung laut 2.4.4.
30	PTI-Wert der Isolierstoffe, die für Iso- lierung verwendet werden	PTI 175 gemäß 6.13.2
31a	Art des Schutzleiteranschlusses	N gemäß 7.4.3, Erdungsanschluss gemäß 9.1.1
39	Wirkungsweise	Wirkungsweise TYP 1 gemäß 2.6.1
40	Zusätzliche Eigenschaften für Wir- kungsweise	C gemäß 6.4.3.3
51	Temperaturen der Glühdrahtprüfung (Abschnitte 21.2.1, 21.2.2, 21.2.3 und 21.2.4	Gehäuse 550°C, die Kabel- durchführung/Zugentlastung mit 650°C; Kategorie B gemäß EN 60730-1:2000/A1:2004;
75	Bemessungs-Stoßspannung (Abschnitte 2.1.12, 20.1	Gemäß EN 61000-6-2:2005, EN 60730-1:2011, EN 301 489-1 (V1.9.2) Leitung gegen Leitung Leitung(en) gegen Erde Signal- und Steuerleitun- gen: \pm 1 kV Gleichstrom-Netzeingänge: \pm 0.5 kV \pm 0.5 kV Wechselstrom-Netzeingänge: \pm 1 kV \pm 2 kV
77	Temperatur der Kugeldruckprüfung	gemäß 21.2.1, 21.2.2, 21.2.3 und 21.2.4, Case (Gehäuse): Ball pressure test 1: 102 °C Cable bushing (Kabeldurchführung): Ball pressure test 2: 125 °C
80	Bemessungs-Stoßspannung für die Kriech- oder Luftstrecke	Gemäß EN 61000-6-2:2005, EN 60730-1:2011, EN 301 489-1 (V1.9.2) Leitung gegen Leitung Leitung(en) gegen Erde Signal- und Steuerleitungen: \pm 1 kV Gleichstrom-Netzeingänge: \pm 0.5 kV \pm 0.5 kV Wechselstrom-Netzeingänge: \pm 1 kV \pm 2 kV

Garantiebedingungen und Entsorgung

Fronius Werksga- rantie	Detaillierte, länderspezifische Garantiebedingungen sind im Internet erhältlich: www.fronius.com/solar/garantie
Entsorgung	Sollte Ihr Ohmpilot eines Tages ausgetauscht werden, nimmt Fronius das Altgerät zurück und sorgt für eine fachgerechte Wiederverwertung.
Berücksichtigte Normen und Richtlinien	CE-Kennzeichen Alle erforderlichen und einschlägigen Normen sowie Richtlinien im Rahmen der einschlä- gigen EU-Richtlinie werden eingehalten, sodass die Geräte mit dem CE-Kennzeichen ausgestattet sind.

Contents

Safety rules	
Explanation of safety notices	
General	
Environmental conditions	
Qualified personnel	
Noise emission values	
EMC measures	
Data protection	
Copyright	
General information	67
General	
Intended use	
Components of the solution as a whole	
Integrating the Fronius Smart Meter	69
Description of the device	69
To be considered when designing the system	70
Warning notices on the device	74
Control elements and connections	
Indicators/controls on the device	
Selection of bester	
1 phase beater	
3 phase heater	
5-priase ricaler.	
Installation and commissioning	75
Installation location and position	
General comments regarding choice of location	
Choice of location	77
Explanation of symbols - installation position	78
Wall mounting	
Safety	80
Selecting wall plugs and screws	80
Recommended screws	80
Mounting the Ohmpilot on the wall	80
Installation	82
Strinning lengths	
Electrical connection	82
1-phase heating element up to 3 kW	83
Application example 1	
3-nhase heating element 900 W up to 9 kW	
Application example 2	
1-nhase beating element up to 3 kW with beat nump control	
Application example 3	
Settings in the menu area	
1-nhase beating element up to 3 kW and external source	
Application example 4	
Settings in the menu area	
Two beating elements 3 phase and 1 phase	
Application example 5	
Softings in the many area	
June 3 phase beating elements up to 0 kM	
Application example 6	
Application example o	
Seturitys in the filenu area	
Establishing the data connection	
Connect the inverter to the Ohmnilet	

Establishing a connection via Modbus RTU	
Establishing a connection via LAN	
Establishing a connection via WLAN	
Web interface of the Ohmpilot	105
Web interface	
Status indicator on web interface	
Optional settings	
Manual settings for HEATER 1	
Activating legionella prevention	
Adapting the day curve	
Temperature limitation	
Appendix	111
Status Codes	
Status codes	
Technical data	
Input data	
Interfaces	
Output data	
General data	
Tests/specifications	
Tests/specifications	
Warranty terms and conditions, and disposal	
Fronius manufacturer's warranty	117
Disposal	117
Applicable standards and directives	

Safety rules

Explanation of safety notices

DANGER!

Indicates immediate danger.

If not avoided, death or serious injury will result.

🚹 WARNING!

Indicates a potentially hazardous situation.

If not avoided, death or serious injury may result.

CAUTION!

Indicates a situation where damage or injury could occur.

If not avoided, minor injury and/or damage to property may result.

NOTE!

Indicates a risk of flawed results and possible damage to the equipment.

General

The device has been manufactured in line with the state of the art and according to recognized safety standards. If used incorrectly or misused, however, it can cause:

- Injury or death to the operator or a third party
- Damage to the device and other material assets belonging to the operating company.

All personnel involved in commissioning, maintenance, and servicing of the device must:

- Be suitably qualified
- Have knowledge of and experience in dealing with electrical installations and
- Have fully read and precisely followed these Operating Instructions

The Operating Instructions must always be at hand wherever the device is being used. In addition to the Operating Instructions, attention must also be paid to any generally applicable and local regulations regarding accident prevention and environmental protection.

All safety and danger notices on the device:

- Must be kept in a legible state
- Must not be damaged
- Must not be removed
- Must not be covered, pasted or painted over

The terminals can reach high temperatures.

Only operate the device when all protection devices are fully functional. If the protection devices are not fully functional, there is a danger of:

- Injury or death to the operator or a third party
- Damage to the device and other material assets belonging to the operating company

Any safety devices that are not fully functional must be repaired by an authorised specialist before the device is switched on.

Never bypass or disable protection devices.

For the location of the safety and danger notices on the device, refer to the section headed "General remarks" in the Operating Instructions for the device.

Any equipment malfunctions which might impair safety must be remedied before the device is turned on.

This is for your personal safety!

Environmental conditions	Operation or storage of the device outside the stipulated area will be deemed as not in accordance with the intended purpose. The manufacturer accepts no liability for any damage resulting from improper use.			
Qualified person- nel	The servicing information contained in these operating instructions is intended only for the use of qualified service engineers. An electric shock can be fatal. Do not carry out any actions other than those described in the documentation. This also applies to quali- fied personnel.			
	All cables and leads must be secured, undamaged, insulated and adequately dimensio- ned. Loose connections, scorched, damaged or inadequately dimensioned cables and leads must be immediately repaired by authorised personnel.			
	Maintenance and repair work must only be carried out by an authorised specialist.			
	It is impossible to guarantee that bought-in parts are designed and manufactured to meet the demands made on them, or that they satisfy safety requirements. Use only original spare parts (also applies to standard parts).			
	Do not carry out any alterations, installations, or modifications to the device without first obtaining the manufacturer's permission.			
	Components that are not in perfect condition must be changed immediately.			
Noise emission values	The maximum sound power level of the inverter is specified in the Technical Data.			
	The device is cooled as quietly as possible with the aid of an electronic temperature con- trol system; this depends on the amount of converted power, the ambient temperature, the level of soiling of the device, etc.			
	It is not possible to provide a workplace-related emission value for this device because the actual sound pressure level is heavily influenced by the installation situation, the power quality, the surrounding walls and the properties of the room in general.			
EMC measures	In certain cases, even though a device complies with the standard limit values for emissi- ons, it may affect the application area for which it was designed (e.g. when there is sen- sitive equipment at the same location, or if the site where the device is installed is close to either radio or television receivers). If this is the case, then the operator is obliged to take appropriate action to rectify the situation.			
Data protection	The user is responsible for the safekeeping of any changes made to the factory settings. The manufacturer accepts no liability for any deleted personal settings.			

Copyright

Copyright of these operating instructions remains with the manufacturer.

The text and illustrations are all technically correct at the time of printing. We reserve the right to make changes. The contents of the operating instructions shall not provide the basis for any claims whatsoever on the part of the purchaser. If you have any suggestions for improvement, or can point out any mistakes that you have found in the instructions, we will be most grateful for your comments.

General information

Intended use	With its "24 hours of sun" vision, Fronius is aiming to offer its customers solutions for generating, storing, distributing and using energy in an intelligent and cost efficient manner. The use of surplus energy for hot water preparation constitutes a simple option, with low investment costs, for storing electricity in the form of heat and using it at a time of the customer's choosing. The Fronius Ohmpilot, which carries out precisely this task, is therefore an ideal addition to the Fronius product portfolio in the area of energy management and a further step towards "24 hours of sun".			
Components of the solution as a whole	The solution as a who - Fronius Snaplnve - Fronius Syme version 3.8.1 software vers - Fronius Prime - Fronius Smart Me - Fronius Ohmpilot - Resistive load (e.e.	le consists of the follov erter or GEN24 series in o / Galvo / Eco or Prim -x or higher) or Fronius sion V1.8.1.x onwards) o / Symo GEN24 eter g. boiler with heating e	ving components: nverters o (from Fronius Datan s Symo Hybrid (from F lement)	nanager 2.0 software ronius Hybridmanager
Integrating the Fronius Smart Meter	A Fronius Smart Meter is required to operate the Ohmpilot so that the surplus energy can be measured. On the inverter website, it must be set whether the Fronius Smart Meter is installed at the feed-in point or in the consumption branch.			
Description of the device	The Ohmpilot is a separate device that can control the surplus power from the PV system in a continuously variable manner using pulse width modulation for a phase between 0 and 100% (or 0 and 3 kW). In addition, the Ohmpilot has 2 additional outputs for switching further phases. This means that heating elements with an output of 300 W to 9 kW can be controlled in a continuously variable manner. A heating element with up to 3 kW output can be controlled in a continuously variable manner using one phase. For a heating element with 9 kW output, the surplus power of 0 - 3 kW is controlled in a continuously variable manner using one phase.			
	Power range	Phase 1	Phase 2	Phase 3
	0 - 3 kW	0 - 3 kW conti- nuously variable	-	-
	3 - 6 kW	0 - 3 kW conti- nuously variable	3 kW fixed	-
	6 - 9 kW	0 - 3 kW conti- nuously variable	3 kW fixed	3 kW fixed

To be considered when designing the system

NOTE!

Ohm pilot phase control

The Ohmpilot controls to the sum of all phases. The Ohmpilot is not suitable for the rare case of phase-accurate billing.

NOTE!

Ohmpilot and Fronius Datamanager / Hybridmanager

Only one Ohmpilot can be used per Fronius Datamanager / Hybridmanager.

NOTE!

Ohmpilot and dynamic power reduction

From software version 3.13.1-x and onwards on the Fronius Datamanager or 1.11.1-x onwards on the Fronius Datamanager, the Ohmpilot can be used together with the dynamic power reduction of 0-100%.

NOTE!

Use of other generation sources

With the Fronius Datamanager Box 2.0, any other generation source (CHP, third-party inverter, etc.) can also be used. However, since information about the power produced and the consumption is missing, this cannot be displayed in Solarweb.

NOTE!

Due to high heat outputs, the Ohmpilot cannot be operated in emergency power situations.

It is therefore recommended to install the Ohmpilot outside of the backup power branch. If the Ohmpilot is installed in the emergency power branch, the existing automatic circuit breaker of the Ohmpilot must be switched off in the event of a power failure. Alternatively, the heating element measurement must be changed to manual and the minimum temperature and legionella prevention must be deactivated. (See chapter "Activating legionella prevention" on page 2.2). The power level required for these functions exceeds the power limits in emergency power mode. Since these functions are blocked when emergency power mode starts, these settings cannot be changed during a power failure.

Danger from connecting an incorrect load (e.g. fan heater).

- The result is destruction of the load.
- Connect only purely resistive loads.

CAUTION!

Danger from connecting an electronic thermostat.

The result is destruction of the Ohmpilot or load.

Use mechanical temperature sensors.

IMPORTANT! If the water is hard, the heating element may become calcified, especially if the minimum temperature is set above 60 °C. We recommend an annual inspection. To do this, remove the heating element from the storage system and remove the limescale. Do not scratch the surface of the heating element (formation of corrosion).

Warning notices on the device

Warning notices and safety symbols are affixed to the left side of the Ohmpilot. These warning notices and safety symbols must not be removed or painted over. They warn against incorrect operation, as this may result in serious injury and damage.



Safety symbols:

Danger of serious injury and damage due to incorrect operation



Do not use the functions described here until you have fully read and understood the following documents:

- These Operating Instructions
- All the Operating Instructions for the system components of the photovoltaic system, especially the safety rules



Dangerous electrical voltage



Before opening the machine, wait for the capacitors to discharge!



Hot surface

Text of the warning notices:

WARNING!

An electric shock can be fatal. Before opening the device, it must be disconnected at the input and output. Wait for the capacitors to discharge (15 seconds).

WARNING!

The device must not be covered and nothing may be hung over the device or the cables.

Control elements and connections

Indicators/ controls on the device				1x WPS 2x ACCESS POINT 3x BOOST	
		CHARPEOT	s 1x	WPS (Wi-Fi Protected Setup) opens for 2 minutes or until successful pairing with the router. Pressing the WPS button on the router sends the WLAN password to the Ohmpilot.	
	TTT .	Press	s 2x	WLAN access point is activated for 30 minutes so that settings can be imple- mented on the Ohmpilot via the Fronius Solar.web app.	
		Press	s 3x	Boost mode - dimmer level is activated for 4 hours at 100%, L2 and L3 are swit- ched through. This may result in electri- city being sourced from the grid.	
		Pres	s again	Ohmpilot is returned to standard opera- ting mode, boost mode, access point or WPS are deactivated.	
	G Heating tor	indica- Dark Gree	en flashing	No power supply to the Ohmpilot. The faster the flashing frequency, the greater the heat output. At 0 W heat out- put, the LED flashes slowly, at full output fast.	
		Gree shing Gree	en 2x fla-) en flashing	element and detects whether a 1- or 3- phase heater is connected. Minimum temperature undercut or Legionella prevention active (full heat output).	
	Connect cator	/LAN Dark ion indi- Blue Blue Blue	1x flashing 2x flashing steady	No connection WPS (Wi-Fi Protected Setup) opened WLAN Access Point open Connection to network	
	Error ind	licator Dark Red Red Red Red Red	1x flashing 2x flashing 3x flashing 4x flashing 5x flashing	No error No connection to the inverter Temperature measurement faulty Heating element defect Ohmpilot defective Minimum temperature not reached	
			A detailed description of the error is provided in Solar Web.		
Connection area



- (1) Green LED
- (2) Blue LED
- (3) Red LED
- (4) Button
- (5) Ethernet RJ45 At least CAT5, screened
- (6) Modbus RTU (default address 40)
 Spring balancer 0.2 1.5 mm², max. 1000 m, screened and twisted
- (7) Temperature sensor terminal connection
 PT 1000, spring balancer 0.2 1.5 mm²
- (8) INPUT grid supply
 1x 230 V, or 3x 230 V, spring balancer 1.5 2.5 mm²
- (9) OUTPUT L3 heating element Spring balancer 1.5 - 2.5 mm²
- (10) OUTPUT L2 heating element Spring balancer 1.5 - 2.5 mm²
- (11) Multi-function relay output, (see application examples)
 Variable max. 13 A resistive load, spring balancer 1.5 2.5 mm²

WARNING!

Dangerous voltages.

A wire detaches and touches dangerous voltages.

- If signal cables are connected, the individual wires must be tied together with a cable tie directly upstream of the terminal.
- (12) OUTPUT heating element

Continuously variable up to 3 kW

Selection of heater

1-phase heater	 Controlled in a continuously variable manner from 0 to 3 kW 0.3 to 3 kW Purely resistive load (no electronic temperature limiters, fans, etc.)
3-phase heater:	 Controlled in a continuously variable manner from 0 to 9 kW. 0.9 to 9 kW Equal load distribution on all 3 phases (e.g. 3 x 3 kW). If a mechanical temperature switch is being used, it must switch all 3 phases simultaneously. Purely resistive load (no electronic temperature limiters, fans, etc.) Neutral conductor must be implemented (this can generally also be retrofitted) Temperature limitation A mechanical temperature switch is not available, a temperature switch is not available, a temperature switch to limit the maximum temperature. (See chapter "Temperature limitation" on page 2.4) N L1 L2 L3

Example for calculation of charging time 500-litre boiler, heater can be fitted at the very bottom of the boiler, temperature spread 45 - 60 °C = 15 °C; 4.5 kW heater

Possible stored energy = 0.5 m³ x 1.16 kWh x 15 $^{\circ}$ C = 8.7 kWh If the heater is fully activated, the heating up takes approx. 2 hours (8.7 kWh / 4.5 kW)

NOTE!

Power adjustment

So that optimal use can be made of the surplus power and the hot water is reheated quickly, the heater output should be adapted to the output of the photovoltaic system, e.g. 5 kWp => 4.5 kW heater.

Installation and commissioning

Installation location and position

General comments regarding choice of location Please note the following criteria when choosing a location for the Ohmpilot:



If the Ohmpilot is installed in an enclosed space, then forced-air ventilation must be provided to ensure adequate heat dissipation.

IMPORTANT! The maximum cable length from the output of the Ohmpilot to the load (heating element) must not exceed 5 m.

Choice of loca- tion		The Ohmpilot is suitable for installation indoors.
		Do not install the Ohmpilot outdoors. The Ohmpilot corresponds to protection class IP 54 and is protected against spray water from all sides.
		In order to minimise the heating up of the Ohmpilot, do not expose it to direct insolation. Mount the Ohmpilot in a protected position. The Ohmpilot must only be mounted and operated at an ambient tempera- ture of 0-40 °C.
	2000 m	IMPORTANT! The Ohmpilot must not be installed or used at altitudes above 2000 m.

 Do not install the Ohmpilot in: in areas where ammoniac, corrosive vapours, acids or salts are present (e.g. fertiliser stores, ventilation openings from cattle sheds, chemical plants, tanneries, etc.)
 Do not install the Ohmpilot in: places where there is an increased risk of damage from farm animals (horses, cattle, sheep, pigs, etc.) Stables or adjoining areas Storage areas for hay, straw, chaff, animal feed, fertilisers, etc.
The Ohmpilot is designed to be dustproof. However, in areas with a heavy build-up of dust, the thermal efficiency may still be impaired by dust forming on the cooling surfaces. Regular cleaning is necessary in such situations. We therefore recommend not installing the inverter in areas and environments with high dust accumulation.
 Do not install the Ohmpilot in: Greenhouses Storage or processing areas for fruit, vegetables or viticulture products Areas used in the preparation of grain, green fodder or animal feeds

Explanation of symbols - instal- lation position	The Ohmpilot is designed to be installed vertically on a vertical wall.
	Do not install the Ohmpilot horizontally.
	Do not install the Ohmpilot on a sloping surface.
	Do not install the Ohmpilot on a sloping surface with its connection sockets facing upwards.





Do not install the Ohmpilot horizontally on a vertical wall.



Do not install the Ohmpilot such that it overhangs with its connection sockets facing upwards.





Do not install the Ohmpilot such that it overhangs with its connection sockets facing upwards.

Do not install the Ohmpilot such that it overhangs with its connection sockets facing downwards.



Do not install the Ohmpilot on the ceiling.

Wall mounting

▲ WARNING!							
Danger due to residual voltage from capacitors.							
An electric shock can be fatal!							
Wait for the capacitors to discharge. The discharge time is 15 seconds.							
A WARNING!							
Risk of burns from the heat sink when open.							
This can result in personal injury.							
 Do not touch the bot heat sink 							
 Wear suitable protective equipment. 							
IMPORTANT! The IP 54 protection class only applies if the cover is firmly screwed to the back.							
IMPORTANT! Different fixings may be required to fit the Ohmpilot depending on the type of surface. Fixings are therefore not included in the scope of supply of the Ohmpilot. The installer is responsible for selecting the right type of fixing. The Ohmpilot must be mounted with four screws. Ensure that the screws are tight and that the wall is stable.							
To install the Ohmpilot, the manufacturer recommends the use of steel screws with a dia- meter of 4 - 6 mm.							
Risk of contamination or water on the terminals or electronics This may result in damage to the Ohmpilot.							

Mounting the Ohmpilot on the wall







Installation



Electrical connection

WARNING!

Danger from inadequate ground conductor connection.

- This can result in severe personal injury or damage to property.
- Adequately dimension the ground conductor connection.

IMPORTANT! Electrical connection work may only be carried out by a specialist.

IMPORTANT! The ground conductor connection must be perfectly installed and reliably connected.

IMPORTANT! The Ohmpilot must be equipped with an overvoltage protection device of maximum B16 A and a residual-current circuit breaker on the grid side.

IMPORTANT! On the output side, it must be ensured that only purely resistive loads are connected.

IMPORTANT! The maximum cable length from the output of the Ohmpilot to the load (heating element) must not exceed 5 m on EMC grounds.

IMPORTANT! The Ohmpilot must be protected against overvoltage from the grid.

IMPORTANT! When connecting a heating element, check the grounding of the boiler/ buffer and the heating system. Also check the maximum permissible inlet water and hot water temperature when setting the temperature on the heating element.

IMPORTANT! The RS485 conductor should be designed as a data cable in order to prevent any mix-up with the grid conductor when connecting.

1-phase heating element up to 3 kW



- (1) **INPUT grid supply** 1x 230V network, spring balancer 1.5 2.5 mm²
- (2) **OUTPUT up to 3 kW** variable, max. 13 A resistive load, spring balancer 1.5 2.5 mm²
- (3) Hot water boiler
- (4) **Temperature sensor** PT1000
- (5) **External source** (e.g. gas-fired heating)
- (6) Heating element (max. 3 kW)
- (7) Residual current circuit breaker
- (8) Automatic circuit breaker max. B16A
- (9) **Ferrite** (included in scope of supply)

83

EN

IMPORTANT! Plug & Play - no further settings are required for this application after successful connection to the inverter.

The Fronius Smart Meter records the current power at the feed-in point and transfers the data to the inverter. By controlling the Ohmpilot, the inverter adjusts any surplus energy that is available to zero. In detail, this takes place by continuously adjusting the heating element connected to the Ohmpilot. Surplus energy is consumed using the heating element in a continuously variable manner.

If no temperature sensor is fitted, an external source (e.g. gas-fired heating) must be used to ensure the minimum temperature is met.

As an alternative, the Ohmpilot can ensure the minimum temperature. To do this, a temperature sensor must be connected so that the Ohmpilot can measure the temperature. This may result in electricity being sourced from the grid.

The maximum temperature must be set on the heating element thermostat. If the heating element does not have a thermostat, the Ohmpilot can also carry out this task as an alternative (see chapter **Optional settings** on page **108**).

3-phase heating element 900 W up to 9 kW



- (1) **INPUT- grid supply** 3x 230 V, spring balancer 1.5 2.5 mm²
- (2) OUTPUT L3 heating element
- (3) **OUTPUT L2 heating element**
- (4) OUTPUT up to 3 kW variable, max. 13 A resistive load, spring balancer 1.5 2.5 mm²
- (5) Hot water boiler
- (6) **Temperature sensor** PT1000
- (7) **External source** (e.g. gas-fired heating)
- (8) Heating element (max. 9 kW)
- (9) Residual current circuit breaker

EN

- (10) Automatic circuit breaker max. B16A
- (11) **Ferrite** (included in scope of supply)

IMPORTANT! Plug & Play - no further settings are required for this application after successful connection to the inverter.

The Fronius Smart Meter records the current power at the feed-in point and transfers the data to the inverter. By controlling the Ohmpilot, the inverter adjusts any surplus energy that is available to zero. In detail, this takes place by continuously adjusting the heating element connected to the Ohmpilot. This means that the surplus energy is consumed in a continuously variable manner with the heating element.

Depending on the surplus power, the individual phases are switched on or off and the remaining power is consumed at L1. As a result, the heating element output is divided by three.

If no temperature sensor is fitted, an external source (e.g. gas-fired heating) must be used to ensure the minimum temperature is met.

As an alternative, the Ohmpilot can ensure the minimum temperature. To do this, a temperature sensor must be connected so that the Ohmpilot can measure the temperature. This may result in electricity being sourced from the grid.

The maximum temperature must be set on the heating element thermostat. If the heating element does not have a thermostat, the Ohmpilot can also carry out this task as an alternative (see chapter **Optional settings** on page **108**).

IMPORTANT! A heating element with implemented neutral conductor is required.

1-phase heating element up to 3 kW with heat pump control



- (1) **INPUT- grid supply** 1x 230 V, spring balancer 1.5 2.5 mm²
- (2) Multifunctional relay output

WARNING!

Dangerous voltages.

A wire detaches and touches dangerous voltages.

If signal cables are connected, the individual wires must be tied together with a cable tie directly upstream of the terminal.

- (3) OUTPUT up to 3 kW variable, max. 13 A resistive load, spring balancer 1.5 2.5 mm²
- (4) Hot water boiler
- (5) **Temperature sensor** PT1000
- (6) **Heat pump** with SG Ready control input

NOTE!

Relay contacts can oxidize.

The voltage must be at least 15 V and the current at least 2 mA, so that the relay contacts do not oxidise.

- (7) Heating element (max. 3 kW)
- (8) Residual current circuit breaker
- (9) Automatic circuit breaker max. B16A
- (10) **Ferrite** (included in scope of supply)

The Fronius Smart Meter records the current power at the feed-in point and transfers the data to the inverter. By controlling the Ohmpilot, the inverter adjusts any surplus energy that is available to zero. In detail, this takes place by continuously adjusting the heating element connected to the Ohmpilot and by targeted switching on of the heat pump.

For activation, the heat pump must have a control input (e.g. SG Ready or grid operator release). For example, the heat pump can be switched from operating state 2 (normal operation) to operating state 3 (increased operation) as a result of activation of heat pump input 2 by the relay. The heat pump can also be switched from operating state 1 (blocked time set by grid operator) to operating state 2 (normal operation) as a result of activation of heat pump input 1 by the relay.

A description and list of SG Ready heat pumps can be found at: http://www.waermepumpe.de/normen-technik/sg-ready/sg-ready-datenbank/

Relatively small surpluses are consumed using the heating element in a continuously variable manner. From a certain surplus power, it makes sense to activate the heat pump, as it is more efficient (e.g. COP (Coefficient of Performance) for hot water preparation up to 53 $^{\circ}$ C = 2.5).

The optimal switching thresholds depend on:

- Heat pump COP. The higher the temperature to which the hot water is heated, the lower the COP.
- The electrical heat pump output.
- Feed-in tariff and the costs for purchasing electricity.
- Reduction of the heat pump's start-up cycles = increase in service life of the heat pump.
- Thermal losses from the heat pump and the pipes.

If no temperature sensor is fitted, the heat pump must be used to ensure the minimum temperature is met. As an alternative, the Ohmpilot can also ensure the minimum temperature by activating the heat pump. This may result in electricity being sourced from the grid. The maximum temperature must be set on the heating element thermostat and on the heat pump. If the heating element does not have a thermostat, the Ohmpilot can also carry out this task as an alternative (see chapter **Optional settings** on page **108**).

This function can also be combined with a 3-phase heating element.

menu area	Fronius OHMPILOT	GENERAL NETWORK		EN
	GENERAL SETTIN	IGS		
	Designation	Ohmpilot		
	HEATER 1			
	• Automatic	 Manual 		
	Consumer	Single-phase \$	Power (W)	3000
	Temperature sensor present			
	HEATER 2			
	Consumer	SG Ready heat pump \$		
	Starting threshold	Feed-in 💠	3000 🕄	Power (W)
	Switch off threshold	Consume 🜲	500 🗘	Power (W)
	Save			

- Open the Ohmpilot website Chapter Establishing the data connection on page 99 describes how you can access the Ohmpilot website.
- 2 Under HEATER 2 for consumer, select "SG Ready heat pump"
- **3** Select "Feed-in" under Starting threshold and enter the desired output in watts at which the heat pump is to be switched on.
- **4** Under Switch-off threshold, select "Consume" or "Feed-in" and enter the desired output in watts at which the heat pump is to be switched off.

Example 1: If "Consume" has been selected under the switch-off threshold and a power of 500 W has been entered, the heat pump will be switched off as soon as the power being drawn from the grid exceeds 500 W.

Example 2: If "Feed-in" has been selected under the switch-off threshold and a power of 500 W has been entered, the heat pump will be switched off as soon as the power being fed in is less than 500 W.

NOTE!

The heat pump must be connected to the same Fronius Smart Meter.

Between the switch-on and switch-off thresholds, the self-consumption of the heat pump must also be taken into consideration. For example, if the heat pump consumes 3000 Watts of electricity and a hysteresis of 500 Watt must be taken into account, the switch-on threshold can be set to feed-in 3000 Watts and the switch-off threshold to purchase 500 Watts.

1-phase heating element up to 3 kW and external source



- (1) **INPUT grid supply** 1x 230 V, Spring balancer 1.5 2.5 mm²
- (2) Multifunctional relay output

WARNING!

Dangerous voltages.

A wire detaches and touches dangerous voltages.

- ► If signal cables are connected, the individual wires must be tied together with a cable tie directly upstream of the terminal.
- (3) OUTPUT up to 3 kW variable, max. 13 A resistive load, spring balancer 1.5 2.5 mm²
- (4) Hot water boiler
- (5) Temperature sensor PT1000
- (6) **External source** (e.g. gas-fired heating)

NOTE!

Relay contacts can oxidize.

The voltage must be at least 15 V and the current at least 2 mA, so that the relay contacts do not oxidise.

- (7) **Heating element** (max. 3 kW)
- (8) **Residual current circuit breaker**
- (9) Automatic circuit breaker max. B16A
- (10) **Ferrite** (included in scope of supply)

The Fronius Smart Meter records the current power at the feed-in point and transfers the data to the inverter. By controlling the Ohmpilot, the inverter adjusts any surplus energy that is available to zero. In detail, this takes place by continuously adjusting the heating element connected to the Ohmpilot. Surplus energy is consumed using the heating element in a continuously variable manner.

The temperature is measured by the Ohmpilot. If the temperature falls below the minimum, then an external source (e.g. gas-fired heating) will be activated until the minimum temperature is reached again, so that the Ohmpilot only uses surplus energy and does not draw any energy from the grid.

The maximum temperature must be set on the heating element thermostat. If the heating element does not have a thermostat, the Ohmpilot can also carry out this task as an alternative (see chapter **Optional settings** on page **108**).

The heating element is used for switching the legionella prevention on and off.

This function can also be combined with a 3-phase heating element.

GE	ENERA	L SETI	TINGS						
Desig	gnation		Ohmp	ilot					
HEA	ATER 1								
	utomatic		 Manual 		Measure he	ating eleme	nt	C	
Cons	umer		Single-phase	\$	Power (W)			3000	
🗹 Te	emperature ser	nsor present				lla preventio	n (h)		
🗹 Ac	dapt day curve)			Maximu	m temperati	ure		
Time	from:		Time to:		Minimum te	emperature:			
	06:00	C	11:00	C	45	٢	°C		
	11:00	G	13:00	G	50	٢	°C		
	13:00	G	21:00	G	45	٢	°C		
	21:00	C	06:00	©	40	٢	°C		
HEA Cons	ATER 2		Activate externa	al source 🗳					

- 1 Open the Ohmpilot website Chapter Establishing the data connection on page 99 describes how you can access the Ohmpilot website.
- 2 Activate the "Temperature sensor present" field
- 3 Activate the "Adapt day curve" field
- Adjust settings under "Time from", "Time to" and "Minimum temperature" as desired More information can be found in chapter Adapting the day curve on page 109
- 5 Under HEATER 2 for Consumer, select "Activate external source"

Two heating elements - 3-phase and 1-phase



- (1) **INPUT grid supply** 3x 230 V, Spring balancer 1.5 2.5 mm²
- (2) OUTPUT L3 heating element
- (3) **OUTPUT L2 heating element**
- (4) Multifunctional relay output
- (5) OUTPUT up to 3 kW variable, max. 13 A resistive load, spring balancer 1.5 2.5 mm²
- (6) Hot water boiler
- (7) **Temperature sensor** PT1000
- (8) **External source** (e.g. gas-fired heating)
- (9) Heating element 1 (max. 3 kW)

- (10) Buffer
- (11) Heating element 2 (max. 9 kW)
- (12) Residual current circuit breaker
- (13) Automatic circuit breaker max. B16A
- (14) **Ferrite** (included in scope of supply)

Many heating systems consist of a boiler and a buffer, whereby the central heating supplies the buffer and a control system charges the hot water boiler via a pump. As with thermal photovoltaic systems, the Ohmpilot is also capable of heating the hot water boiler first and then the buffer, so that the maximum amount of photovoltaic surplus energy can be stored.

The Fronius Smart Meter records the current power at the feed-in point and transfers the data to the inverter. By controlling the Ohmpilot, the inverter adjusts any surplus energy that is available to zero. In detail, this takes place by continuously adjusting the heating element connected to the Ohmpilot.

For this application, two heating elements are installed, with preference being given to activation of the first heating element (9). Only once the maximum temperature in the boiler (6) has been reached is the second heating element activated in a continuously variable manner, so that the remaining energy can, for example, be stored in a buffer.

If no temperature sensor is connected to the Ohmpilot, after 30 minutes the Ohmpilot attempts to output energy via the first heating element once again. If a temperature sensor is present, the device switches back to the first heating element as soon as a temperature difference of 8 °C is reached (compared to the temperature measured prior to switch-over).

This switching can also be used for layering in a boiler/buffer, so that the maximum temperature is reached in the top part of the boiler using minimal energy and the remaining energy is stored in the lower part of the boiler. By using layering in a storage tank, it is also possible to store significantly more energy, as a minimum temperature is normally maintained in the top part of the boiler. This means that the temperature difference and thus the amount of energy is rather small. In the lower part of the boiler, a high temperature difference of, for example, 50 °C can be used.

Both the first and the second heating element can be 1-phase or 3-phase. For two 3-phase heating elements, see **Application example 6**. If no temperature sensor is fitted, an external source (e.g. gas-fired heating) must be used to ensure the minimum temperature is met.

Alternatively, the Ohmpilot can also ensure the minimum temperature. This may result in electricity being sourced from the grid. The maximum temperature must be set on the heating element thermostat and on the heat pump. If heating element 1 (9) does not have a thermostat, the Ohmpilot can also carry out this task as an alternative (see chapter **Optional settings** on page **108**). However, heating element 2 (11) must have a thermostat.

NOTE!

Heating at the same time.

At no point can both heating elements be heated simultaneously.

Settings in the menu area	(Fronius) OHMPILOT	GENERAL NETWORK		EN
	GENERAL SETTIN	NGS		
	Designation	Ohmpilot		
	HEATER 1			
	• Automatic	Manual		
	Consumer	Single-phase \$	Power (W)	3000
	Temperature sensor present			
	HEATER 2			
	Consumer	Three-phase \$	Power (W)	4500 C
	Save			
	1 Open the Ohmpilo Chapter Establish access the Ohmpil	t website ing the data connec t ot website.	tion on page 99 describ	es how you can

- 2 Under HEATER 1, select "Manual" and "Single-phase or Three-phase"
- 3 Under HEATER 2, select "Single-phase or Three-phase" and enter the output of the load

Two 3-phase heating elements up to 9 kW



- (1) **INPUT grid supply** 3x 230 V, Spring balancer 1.5 2.5 mm².
- (2) **OUTPUT L3 heating element**
- (3) **OUTPUT L2 heating element**
- (4) Multifunctional relay output
- (5) OUTPUT up to 3 kW variable, max. 13 A resistive load, spring balancer 1.5 2.5 mm²
- (6) **Contactor switching**
- (7) Hot water boiler
- (8) **Temperature sensor** PT1000
- (9) **External source** (e.g. gas-fired heating)
- (10) Heating element 1 (max. 9 kW)
- (11) Buffer
- (12) Heating element 2 (max. 9 kW)
- (13) Residual current circuit breaker

- (14) Automatic circuit breaker max. B16A
- (15) **Ferrite** (included in scope of supply)

Many heating systems consist of a boiler and a buffer, whereby the central heating supplies the buffer and a control system charges the hot water boiler via a pump. As with thermal photovoltaic systems, the Ohmpilot is also capable of heating the hot water boiler first and then the buffer, so that the maximum amount of photovoltaic surplus energy can be stored.

The Fronius Smart Meter records the current power at the feed-in point and transfers the data to the inverter. By controlling the Ohmpilot, the inverter adjusts any surplus energy that is available to zero. In detail, this takes place by continuously adjusting the heating element connected to the Ohmpilot.

For this application, two heating elements are installed, with preference being given to activation of the first heating element (10). Only once the maximum temperature in the boiler (7) has been reached is the second heating element (12) activated in a continuously variable manner, so that the remaining energy can, for example, be stored in a buffer.

If no temperature sensor is connected to the Ohmpilot, after 30 minutes the Ohmpilot attempts to output energy via the first heating element once again. If a temperature sensor is present, the device switches back to the first heating element as soon as a temperature difference of 8 °C is reached (compared to the temperature measured prior to switch-over).

This switching can also be used for layering in a boiler/buffer, so that the maximum temperature is reached in the top part of the boiler using minimal energy and the remaining energy is stored in the lower part of the boiler. By using layering in a storage tank, it is also possible to store significantly more energy, as a minimum temperature is normally maintained in the top part of the boiler. This means that the temperature difference and therefore the amount of energy is rather small. In the lower part of the boiler, a high temperature difference of, for example, 50 °C can be used.

The switching must be realised by an external contactor. If no temperature sensor is fitted, an external source (e.g. gas-fired heating) must be used to ensure the minimum temperature is met.

Alternatively, the Ohmpilot can also ensure the minimum temperature. This may result in electricity being sourced from the grid.

The maximum temperature must be set on the heating element thermostat and on the heat pump. If heating element 1 (10) does not have a thermostat, the Ohmpilot can also carry out this task as an alternative (see chapter **Optional settings** on page **108**). However, heating element 2 (12) must have a thermostat.

NOTE!

Heating at the same time.

At no point can both heating elements be heated simultaneously.

Settings in the menu area	Fronius	OHMPILOT	GENERAL	NETWORK		E	EN		
	GENERAL	SETTIN	IGS						
	Designation		Ohm	pilot					
	HEATER 1								
	 Automatic 	(Manual						
	Consumer		Three-phase	÷	Power (W)	3000			
	Temperature sensor present								
	HEATER 2								
	Consumer		Three-phase	\$	Power (W)	3000 Ø			
	Save								
	1 Open the C Chapter E access the	Ohmpilot stablish e Ohmpilo	website ing the da ot website	ata connec	t <mark>ion</mark> on page 99 descri	bes how you can			

2 Under HEATER 2, select "Three-phase" and enter the output of the load

Establishing the data connection

Possible communication channels

The data connection is required for communication between the inverter and the Ohmpilot. The inverter mainly sends default values to the Ohmpilots. For some applications it is necessary to make settings via the Ohmpilot website.



There are 3 possible communication channels:

- Modbus RTU (via RS 485)
- LAN (Ethernet)
- WLAN

NOTE!

Minimum software version.

An inverter from the SnapInverter series (Datamanager 2.0) must have at least software version 3.8.1-x.

Connect the inverter to the Ohmpilot

Each inverter with a Fronius Smart Meter automatically connects itself to the Ohmpilot. However, if there is more than one inverter with Fronius Smart Meter in the network, the wrong inverter can be connected. In this case, the Ohmpilot can be manually connected under System Information on the website of the inverter to be connected.

Information on how to access the inverter website can be found in the "Fronius Datamanager 2.0" Operating Instructions.

			– Components –––––		
			Inverter		
No	Device type	e	PMC		Serial number
1	Fronius Symo 4.	5-3-S 254510	000700930316 4,071,334 0.8	D_DIRECERBOIR	
			Meter		
No	Device	e type	Location of th	ne meter	Serial number
1	Smart Me	eter 63A	Feed-in point (Pri	mary meter)	15060034
			OhmPilot		
No	Serial number	Software version	Hardware version	Paired with	Pairing
1	28136344	61	3	239.3218	Pairing

Establishing a connection via Modbus RTU

[1] Connect the bus cabling (B) to the Ohmpilot.

- (The bus cabling is carried out in parallel via the TX+, TX- and GND cables with the Fronius Smart Meter and the Fronius inverter or Datamanager 2.0).
- Terminate the bus cabling with a resistor on the first and last device.
 The resistor can be activated on the Ohmpilot using DIP switch number 5. See (A).
- 3 Set Modbus address using numbers 1-3 Default address: 40 (For future applications, the Modbus address can be changed using the DIP switches on the Ohmpilot.)



(A) DIP switches

DIP 1-3 = Modbus address BCD DIP 4 = reserve DIP 5 = terminating resistor (120 Ohm)

NOTE!

Avoid confusion of cables.

Use a data cable that is clearly distinguishable from the mains cable, so that there is no confusion and injury and damage to property are avoided.

NOTE!

Faulty cabling.

This is indicated by the red LED indicator flashing 1x.



In order to implement various settings, the WLAN connection must briefly be opened ::

1 Press the button on the Ohmpilot 2x.

- The blue LED flashes (twice) as long as the WLAN access point is active (30 minutes). Before the access point is opened, it searches for available WLAN networks.
- 2 Activate the "Ohmpilot" WLAN network on your smart device or PC.
- In the browser, enter the website http://192.168.250.181 or http://ohmpilotW.local.
 Alternatively, the Ohmpilot can also be searched on the network using the Fronius Solar.web app.

NOTE!

Access the Ohmpilot via the network.

In networks with a DNS suffix, the Ohmpilot can be accessed at http://ohmpilotW.<DNS-Suffix>, e.g. http://ohmpilotW.fronius.com

Establishing a connection via LAN

As standard, the Ohmpilot obtains its IP address automatically from the DHCP server, meaning that no settings are generally necessary.

The inverter automatically searches for the Ohmpilot, and the search process may take up to 5 minutes. If the red LED is not lit and the green LED is flashing, the Ohmpilot is working correctly.

A static IP address can be assigned to the Ohmpilot via the web interface.

Fronius	OHMPILOT	GENERAL	NETWORK		EN
SET UP NE	TWOR	К			
• LAN				ି WLAN	
Get address		Static	O Dynamic		
IP address		192.168.1.16			
Subnet mask		255.255.255.0			
Gateway		192.168.1.1			
Save					

1 Open website http://ohmpilotL.local

Alternatively, the IP address assigned by the DHCP server can also be read out. Almost every router displays its connected devices (clients) on its web interface. Apps such as Fing can help you find the automatically assigned IP address. Alternatively, the Ohmpilot can also be searched on the network using the Fronius Solar.web app.

NOTE!

Access the Ohmpilot via the network.

In networks with a DNS suffix, the Ohmpilot can be accessed at http://ohmpilotL.<DNS-Suffix>, e.g. http://ohmpilotL.fronius.com

To set the IP address manually, the "Static" option must be selected. Then enter the desired IP address.

The Ohmpilot can then be reached at http://ohmpilotL.local or at the fixed IP address assigned.

Establishing a connection via	There are two options for connecting the Ohmpilot to an existing WLAN network:
WLAN	Connecting via WPS (WiFi Protected Setup)
	1 Press the button on the Ohmpilot 1x.

The blue LED flashes (once) as long as WPS is active.

2 Press the WPS button on the router within 2 minutes.

If the blue LED on the Ohmpilot lights up permanently, the connection to the network was successful.

The inverter automatically searches for the Ohmpilot, and the search process can take up to 5 minutes. If the red LED is not lit and the green LED is flashing, the Ohmpilot is working correctly.

Fronius	OHMPILOT	GENERAL	NETWORK			EN	
SET UP N	ETWOR	<					
○ LAN				• WLAN			
			Networks found				
				Select network WLAN_01==> Signal: -50, sec:wpa			
				Get address	⊖ Static	 Dynamic 	
				IP address	0.0.0.0		
				Save & Connect			

Connecting via access point and manual configuration of the WLAN settings

1 Press the button on the Ohmpilot 2x.

The blue LED flashes (once) as long as the WLAN access point is active (30 minutes). Before the access point is opened, it searches for available WLAN networks.

- 2 Activate the "Ohmpilot" WLAN network on your smart device or PC.
- In the browser, enter the website http://192.168.250.181 or http://ohmpilotW.local.
 Alternatively, the Ohmpilot can also be searched on the network using the Fronius Solar.web app.
- [4] Select the desired network in the WLAN network tab.

NOTE!

Desired network not listed.

If the desired WLAN network is not listed, end access point mode by pressing the button again and repeat the process.

- 5 Click on "Save & Connect", enter WLAN password.
 - If the blue LED on the Ohmpilot lights up permanently, the connection to the network was successful.

The inverter automatically searches for the Ohmpilot, and the search process can take up to 5 minutes. If the red LED is not lit and the green LED is flashing, the Ohmpilot is working correctly.

NOTE!

WLAN network scan not possible.

When the access point is opened, it is not possible to scan the WLAN networks.

A static IP address can be assigned to the Ohmpilot via the web interface.

The Ohmpilot can then be reached at http://ohmpilotW.local or at the fixed IP address assigned. Alternatively, the Ohmpilot can also be searched on the network using the Fronius Solar.web app.

NOTE!

Device connections.

Only one device can connect to the Ohmpilot.

NOTE!

Access the Ohmpilot via the network.

In networks with a DNS suffix, the Ohmpilot can be accessed at http:// ohmpilotW.<DNS-Suffix>, e.g. http://ohmpilotW.fronius.com

Web interface of the Ohmpilot

Web interface

Status indicator OHMPILOT ALLGEMEIN NETZWERK Fronius on web interface **N** ŀ Ø ΟΚ 25.4 °C **0 W** STATUS TEMPERATUR HEIZLEISTUNG HEIZUNG 2 🗙 HEIZSTAB L2 🗙 HEIZSTAB L3 🗙 MODELL: Ohmpilot SERIENNUMMER: 27193283 SOFTWAREVERSION: 1.0.11-1 PLATINENVERSION CONTR.: 3 PLATINENVERSION CHOP .: 0 LAN IP-ADRESSE: 192.168.1.126 LAN SUBNET-MASK: 255.255.255.0 LAN MAC-ADRESSE: 00:04:A3:80:F3:E6 WLAN IP-ADRESSE: 192.168.1.127 F8:F0:05:F4:AF:85 WLAN MAC-ADRESSE: RS485 ADRESSE: 40 PAIRING: UHRZEIT: 20:54 13.04.2017 REGLERAUSGANG: 0 W 0

Status

Ohmpilot is operating in normal mode.
The minimum temperature has been exceeded. Heater 1 heats up to 100%.
Legionella heating is active. Heater 1 heats up to 100%.
The Ohmpilot has been switched to boost mode manually. Heater 1 heats up to 100%.
A fault has been detected. More information can be found on Solar Web.
Currently measured temperature. A valid value is only displayed when a temperature sensor is connected.
Current power being used by the Ohmpilot.
Heater 2 is active. Heater 2 may be a second heating element, a heat pump or an external source (e.g. gas-fired heating).
Phase 2 of 3-phase heating element is active.
Phase 3 of 3-phase heating element is active.

Optional settings

Manual settings for HEATER 1

NOTE!

Settings not absolutely necessary.

The settings described here can be made for all the application examples shown above. If they are not described for the respective example, they are not absolutely necessary.

fr	onius	OHMPILO ⁻	GENERAL	NETWORK						EN	
GENERAL SETTINGS											
Designation		Ohm	Ohmpilot								
HE	ATER 1										
 Automatic 		• Manual		Measure heating element				C			
Consumer		Three-phase	\$	Power (W)			3000				
Temperature sensor present				Legionella prevention (h)				168			
🔽 A	dapt day curve	•			🗹 Maximum	temperatur	Ð	60	٢	°C	
Time	from:		Time to:		Minimum ten	nperature:					
	03:00	C	05:00	C	45	٢	°C				
	16:00	©	18:00	G	45	٢	°C				
	20:28	G	20:29	G	52	٢	°C				
	20:25	G	20:26	G	53	٢	°C				
HE	ATER 2										
		0#									
Consumer		OII	•								
	_										
Sa	ive										
Sett	ing the o	utput of H	HEATER 1 I	manually:							

1 Under HEATER 1, select "Manual"

- 2 Select "Single-phase" or "Three-phase" Consumer
- 3 Enter the output of the load

NOTE!

It is not possible to measure heating element 1 automatically.

In the case of applications with a 1-phase and a 3-phase heating element, it is not possible for the Ohmpilot to measure heating element 1 automatically due to the cabling. In this case, the configuration must be carried out manually.

Activating legionella prevention when the legionella prevention system is activated, the hot water is heated to 60 °C at a set interval.

1 Activate the "Temperature sensor present" field
- 2 Activate the "Legionella prevention (h)" field
- 3 Enter the desired legionella prevention cycle

NOTE!

If no hygienic storage tank is being used, measures must be taken to kill legionella bacteria.

If the boiler is operated at a temperature <60 °C for a relatively long period of time and no hygienic storage tank is being used, measures must be taken to kill the legionella bacteria. For private use, it is recommended to implement legionella prevention at least once a week (168 hours). In the case of a large hot water storage tank or a comparatively low consumption of hot water, legionella prevention should be carried out regularly. A PT1000 temperature sensor is required for this function and can be sourced from Fronius under item number 43,0001,1188.

Despite the setting of the "Legionella prevention" function, contamination of water with **legionella is not completely ruled out.**.

Adapting the day curve

This function ensures that the user-specified temperature is not undershot. If there is not sufficient surplus power available, the external source will be started up, if activated, or otherwise electricity will be drawn from the grid in order to ensure a minimum temperature.

Up to four time periods can be defined so that, for example, higher hot water temperatures are only certain to be available at night, but more potential is possible for the surplus during the day due to the fact that a lower target temperature is selected.

Adapting the day curve:

- 1 Activate the "Temperature sensor present" field
- 2 Activate the "Adapt day curve" field
- 3 Under "Time from", enter the time from which the Ohmpilot should start to heat to the new minimum temperature.
- 4 Under "Time to" enter the time until which the Ohmpilot should heat to the minimum temperature.
- 5 Under "Minimum temperature"" select the desired end temperature

NOTE!

Time ranges overlap.

If time ranges overlap, the higher temperature is used, so that, for example, a basic temperature of 40 °C can be set for the whole day and is increased to 50 °C at certain times.

NOTE!

Undefined time ranges.

If time ranges are not defined, then in this time the system is not heated via the grid or the external source, but only using PV surplus.

NOTE!

Primary heat source.

If heater 1 is the primary heat source, the daily cycle must be adjusted to ensure the
desired minimum temperature. A PT1000 temperature sensor is required for this function
and can be sourced from Fronius under item number 43,0001,1188. The position of the
temperature sensor in the boiler should be selected so that sufficient hot water is avail-
able. However, it must be mounted above the heating element / external source.

Example 1: 03:00 - 05:00 45 °C => So that in the morning at 06:00 there is hot water available for showering. After showering, the hot water should only be produced using surplus energy. 16:00 - 18:00 45 °C => If there was not enough surplus energy available, the water is reheated for showering. After showering, reheating should no longer be carried out in order to keep heat losses to a minimum.

Temperature limi-
tationIf heater 1 does not have a configurable thermostat, this function can be used to limit the
temperature.

- 1 Activate the "Temperature sensor present" field
- 2 Activate the "Temperaturbegrenzung" [Temperature limitation] field
- 3 Enter maximum temperature (e.g. 60 °C)

NOTE!

This function is only possible for heater 1.

If a second heating element is used as heater 2, it must have a thermostat. A PT1000 temperature sensor is required for this function and can be sourced from Fronius under item number 43,0001,1188. The position of the temperature sensor should be just above the heating element, so that the incoming cold water is immediately heated again and thus the maximum amount of storage is used.

Appendix

Status codes

- Sending of errors
 Errors are saved in the Datamanager 2.0 and can be sent via Solar Web.
 Possible error outputs (as at 07/12/2015):

Code	Description	Cause	Remedy
906	Heating element 1 faulty - short circuit L1	The load on L1 is higher than 3 kW. Short circuit on L1.	Check heating element 1. Check wiring.
907 908	HE 1 - Overload on L2 HE 1 - Overload on L3	Current on L2 greater than 16 A. Current on L3 greater than 16 A.	Check HE 1 and replace if necessary.
909 910 911	HE 1 faulty - L1 highly resistive HE 1 faulty - L2 highly resistive HE 1 faulty - L3 highly resistive	No current is flowing through L1/L2/L3. L1/L2/L3 of HE 1 faulty. Phase L1/L2/L3 interrupted.	Check L1/L2/L3. Check L1/L2/L3 connections.
912	HE 2 faulty - short circuit L1	The load on L1 is higher than 3 kW. Short circuit on L1.	Check HE 2. Check wiring.
913 914	HS 2 - Overload on L2 HE 2 - Overload on L3	Current on L2 greater than 16 A. Current on L3 greater than 16 A.	Check HE2 and replace if necessary.
915 916 917	HE 2 faulty - L1 highly resistive HE 2 faulty - L2 highly resistive HE 2 faulty - L3 highly resistive	No current is flowing through L1/L2/L3. L1/L2/L3 of HE 2 faulty. Phase L1/L2/L3 interrupted.	Check L1/L2/L3. Check L1/L2/L3 connections.
918 919	Relay 2 faulty Relay 3 faulty	Relay R2/R3 sticking.	Replace Ohmpilot.
920	TS short circuit	TS input resistance less than 200 Ohm. No PT1000 TS connected. TS defective.	Check cable and connec- tions on TS cable. Replace TS.
921	TS not connected or faulty	No TS connected (input resistance greater than 2000 Ohm). TS is activated (should be deactivated). TS cable defective. TS defective. No PT1000 TS connected.	Connect TS to device. Deactivate TS via the website (if sensor not nee- ded). Check TS cable. Replace TS.
922 923	60 °C for legionella pre- vention could not be achieved within 24 hours. Minimum temperature	ES is switched off/faulty. (922 only). TS has not been fitted correctly. Heating system has not been dimensioned properly (hot water consumption too high, etc.).	Switch on ES (922 only). Fit TS above the HE (in the protective tube). Deactivate legionella pre-
	could not be achieved wit- hin 5 hours	HE/TS faulty.	vention via the website. Replace HE/TS.
924	ES could not achieve mini- mum temperature within 5 hours.	ES switched off/defective. ES not connec- ted to Ohmpilot. TS incorrectly mounted. Heating system not dimensioned properly (hot water consumption too high, etc.). TS faulty.	Switch on ES. Connect ES to relay 1. Fit TS above the heater battery of the ES. Check mini- mum temperature setting. Replace TS.

925	Time not synchronised	Time not synchronised in the last 24 hours. Router has been switched off/ reconfigured.	Check connection bet- ween Ohmpilot and inver- ter. Switch on router. Check network settings.
926	No connection to inverter	No connection between inverter and Ohm- pilot. Inverter switched off. The Ohmpilot also needs a connection to the inverter at night. Router switched off/faulty/reconfigu- red. Night switch-off function enabled on the inverter. Poor WLAN connection bet- ween inverter or Ohmpilot and router.	Check connection. Switch on the inverter. Update the software. Switch Ohm- pilot and inverter off and on again. The night switch-off function of the inverter must be disabled. On the inverter display, set night mode to ON under "SETUP/Display Setting/Night Mode" menu. Switch on router. Reposition the WLAN antenna in a better loca- tion. Check network set- tings.
927	Ohmpilot overtemperature	Ambient temperature too high (>40 °C). The output of the heating element is too high Ventilation slots are covered.	Install Ohmpilot in a coo- ler location. Use a heating element with a permissi- ble output. Uncover the ventilation slots.
928	Ohmpilot undertempera- ture	Ambient temperature too low (<0 °C).	Install Ohmpilot in a war- mer location. Installation outdoors is not permitted.
	Residual current-operated circuit breaker is triggered	N and L mixed up.	Connect N and L cor- rectly.
	Ohmpilot is not using any surplus	Thermostat on heating element has swit- ched off. Safety thermostat (STC) on the heating element has triggered.	Wait until the thermostat switches on again. Reset the safety thermostat.
	Ohmpilot is using only part of the surplus power	Heating element power is lower than sur- plus power.	Select a larger heating element where necessary
	Power at the feed-in point is not always adjusted to 0	Load and generation fluctuations require a few seconds to settle down.	
	After switch-on, the green LED makes 2 long flashes	Thermostat on heating element has swit- ched off. Heating element is not connec- ted.	Briefly turn up the thermo- stat for the power measu- rement. Connect the hea- ting element.
	After a power failure, the Ohmpilot will no longer work	After a power failure, if it does not receive an IP address after 40 seconds, the Ohm- pilot automatically assigns a fixed IP address to 169.254.0.180 (only valid if the Ohmpilot is connected to the router via WLAN).	Restart Ohmpilot so that the WLAN connection is re-established.

HE=heating element TS=temperature sensor WR=inverter ES=external source (e.g. gas-fired heating)

Technical data

Input data	Frequency Nominal Voltage Max. Input current	50 Hz 230 V / 400 V 1 X 16 A / 3 x 16 A
Interfaces	Modbus RTU LAN WLAN Temperature sensor	RS 485, max 1000 m, screened and twis- ted Ethernet min. CAT5, screened IEEE 802.11 b/g/n PT1000 (max. 30 m)
Output data	Analogue out 1-phase / 3-phase Nominal current analogue per phase Short circuit current analogue out Max. Current relay out Multi-function relay out Efficiency in rated operation Consumption in standby	Continuously variable 0 - 3 / 0 - 9 kW 13 A 16 A (max. 5 sec.) L2 / L3 16A (max. 5 sec.) min. 15V / 2mA; max. 16 A (max. 5 sec.) min. 98% type 1.8 W
General data	Dimensions (height x width x depth) Weight Protection class Installation Ambient temperature range Permissible humidity Cooling Storage temperature EMC device class Overvoltage category Pollution degree	340 mm x 270 mm x 123 mm 3.9 kg IP54 Wall 0 to 40 °C 0-99% (non-condensing) Convection -40 to 70 °C B 3 3

Tests/specifications

Tests/specifications Tests/information according to EN60730 Section 1 Table 7.2

6a	Construction	Electronic RS 2.5.5, independently mounted RS
19	Screwless terminals	2.10.6.1 type X mounting
24	Classification of the RS according to protection against electric shock, Section 6.8	Protection class I 6.8.3
29	Type of shutdown or open circuit for each circuit	Micro interruption according to 2.4.4.
30	PTI value of the insulation materials used for insulation	PTI 175 as per 6.13.2
31a	Type of ground conductor connection	N in accordance with 7.4.3, grounding terminal according to 9.1.1
39	Operating principle	Operating principle TYPE 1 according to 2.6.1
40	Additional properties for operating principle	C in accordance with 6.4.3.3
51	Glow wire test temperatures (Sections 21.2.1, 21.2.2, 21.2.3 and 21.2.4)	Housing 550 °C, cable gland/strain- relief device 650 °C; category B according to EN 60730-1:2000/ A1:2004;
75	Rated surge voltage (Sections 2.1.12, 20.1)	According to EN 61000-6-2:2005, EN 60730-1:2011, EN 301 489-1 (V1.9.2) Wire to wire Wire(s) to ground Signal and control lines: \pm 1 kV DC mains inputs: \pm 0.5 kV \pm 0.5 kV AC mains inputs: \pm 1 kV \pm 2 kV
77	Temperature of the ball pressure test	According to 21.2.1, 21.2.2, 21.2.3 and 21.2.4, case (housing): Ball pressure test 1: 102 °C Cable bushing (cable gland): Ball pressure test 2: 125 °C
80	Rated surge voltage for creepage distance or contact-gap	According to EN 61000-6-2:2005, EN 60730-1:2011, EN 301 489-1 (V1.9.2) Wire to wire Wire(s) to ground Signal and control lines: \pm 1 kV DC mains inputs: \pm 0.5 kV \pm 0.5 kV AC mains inputs: \pm 1 kV \pm 2 kV

Warranty terms and conditions, and disposal

Fronius manufac- turer's warranty	Detailed, country-specific warranty conditions are available on the internet www.fronius.com/solar/garantie
Disposal	If you decide in the future to replace your Ohmpilot, Fronius will take back the old device and arrange for it to be recycled in an appropriate manner.
Applicable stan- dards and directi- ves	CE mark The devices conform to all the requisite and relevant standards and guidelines that form part of the relevant EU directive, and are therefore permitted to display the CE mark.

FRONIUS INTERNATIONAL GMBH

Froniusstraße 1 A-4643 Pettenbach AUSTRIA contact@fronius.com www.fronius.com

Under **www.fronius.com/contact** you will find the addresses of all Fronius Sales & Service Partners and locations



Find your spareparts online

